



Limited One Year Warranty

T&S warrants to the original purchaser (other than for purposes of resale) that such product is free from defects in material and workmanship for a period of one (1) year from the date of purchase. During this one-year warranty period, if the product is found to be defective, T&S shall, at its options, repair and/or replace it. To obtain warranty service, products must be returned to...

T&S Brass and Bronze Works, Inc.
Attn: Warranty Repair Department
2 Saddleback Cove
Travelers Rest, SC 29690

Shipping, freight, insurance, and other transportation charges of the product to T&S and the return of repaired or replaced product to the purchaser are the responsibility of the purchaser. Repair and/or replacement shall be made within a reasonable time after receipt by T&S of the returned product. This warranty does not cover items which have received secondary finishing or have been altered or modified after purchase, or for defects caused by physical abuse to or misuse of the product, or shipment of the products.

Any express warranty not provided herein, and any remedy for Breach of Contract which might arise, is hereby excluded and disclaimed. Any implied warranties of merchantability or fitness for a particular purpose are limited to one year in duration. Under no circumstances shall T&S be liable for loss of use or any special consequential costs, expenses or damages.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you. Specific rights under this warranty and other rights vary from state to state.

P/N: 098-005241-45 Rev 4
Date: 10-23-02
Drawn: TEH
Checked: MVW 11-26-02
Approved: MVW 11-26-02

Installation and Maintenance Instructions




BASE FAUCET ASSEMBLY 002824-40 - for Pre-Rinse Units

Deutsch: Installations- und
Wartungsanleitungen

Español: la Instalación y las
Instrucciones de
Mantenimiento

Français: les Instructions
d'Installation et
d'Entretien

Exploded View

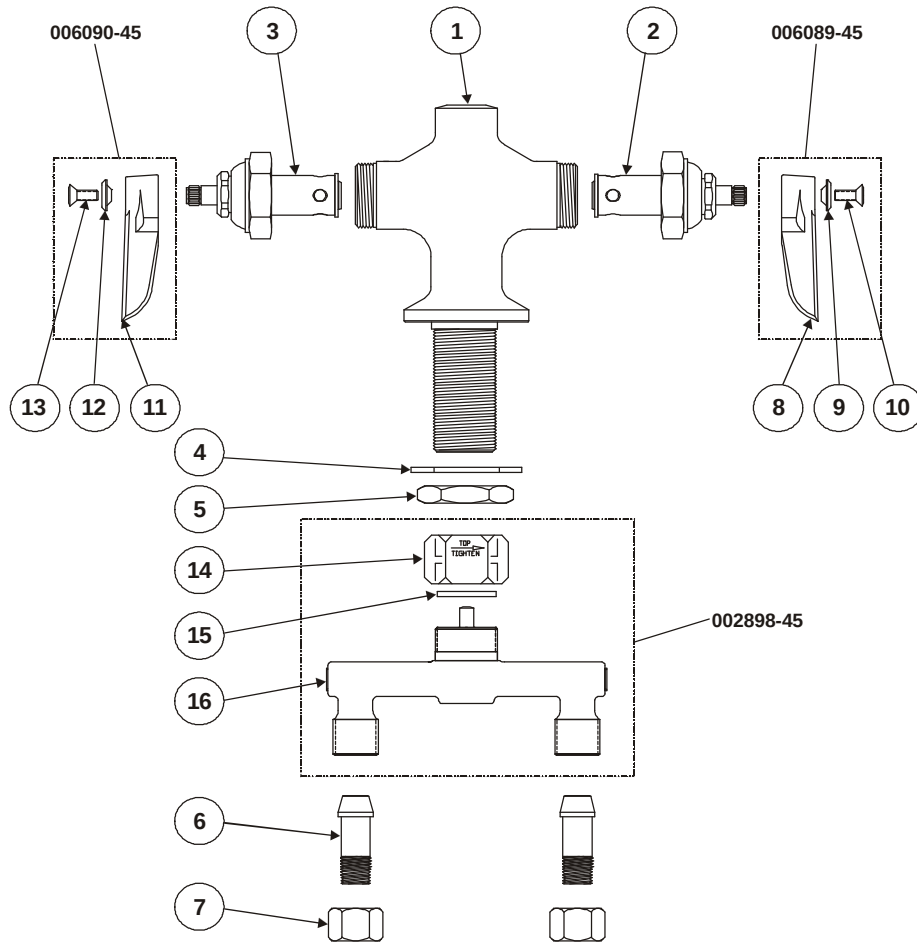

* Some items are listed for instructional purposes and may not be sold as separate parts.

Part Number Guide

Base Faucet Assembly - 002824-40

1	Body, Faucet	*
2	Asm, Spdl LH - Eterna w/ Spring Checks	002711-40
3	Asm, Spdl RH - Eterna w/ Spring Checks	002712-40
4	Washer, Body	002290-45
5	Locknut, Shank	000965-45
6	Tailpiece	001592-20
7	Nut, Nipple Coupling	000958-20

Lever Handle (RH) Assembly - 006089-45

8	Lever Handle, Zinc - Cold	001636-45
9	Index Button, Blue - Cold	001660-45
10	Screw, Lever Handle	000922-45

Lever Handle (LH) Assembly - 006090-45

11	Lever Handle, Zinc - Hot	001637-45
12	Index Button, Red - Hot	001661-45
13	Screw, Lever Handle	000922-45

Spreader Assembly - 002898-40


14	Nut, Spreader Coupling	000736-20
15	Washer, Spreader	001041-45
16	Asm, Spreader Body & Pin	*

General Instructions


Faucet Installation:

1. Shut off water supply and drain lines. Drill a hole approximately 1-1/4" diameter in countertop where you are installing no.1.

2. Loosen no.14 with a 1-15/16" wrench and separate the two sections.

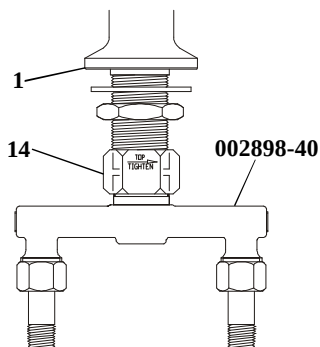


Note: Dont turn no.14 any further after disassembly.

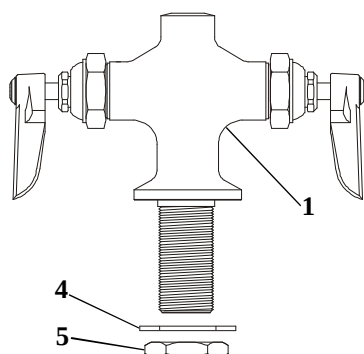

3. Remove no.5 and no.4 from no.1.

4. Place no.1 through hole in sink, align hot and cold sides parallel to sink line

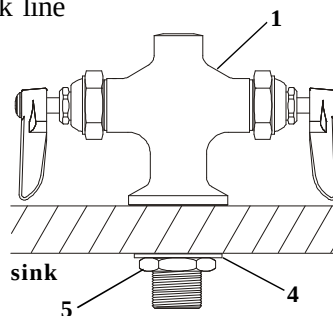

5. Install no.4 and no.5 on no.1, tighten no.5. Screw no.14 up on no.1, tightening by hand, making sure to align pins on 002898-40 with corresponding holes at base of no.1.

Note: If 002898-40 and no.1 are joined correctly, the 002898-40 will not move or twist if tried.

6. Tighten no.14 with a 1-15/16" wrench.


7. Connect supply lines and check for leaks.

Caution: Turn off water supply at base faucet when not in use.


Instrucciones Generales

Instalación de la canilla:

1. Cierre la fuente principal de agua y desagüe las tuberías. Con el taladro perforo un hueco aproximadamente de 1-1/4" de diámetro encima del mostrador donde la parte no.1 será instalada.
2. Afloje la parte No.14 con una llave de 1-15/16" y separe las dos secciones.

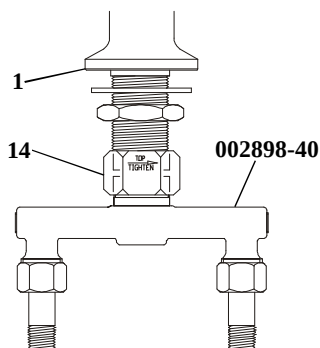


Nota: No gire la parte No.14 después de desarmarla.

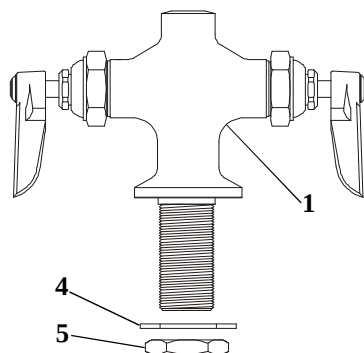

3. Quite las parte No.5 y No.4 de la parte No.1.

3. Quite las parte No.5 y No.4 de la parte No.1.
4. Coloque la parte No.1 a través del hueco en el mostrador, alinee la llave caliente y fría paralelo con el mostrador.

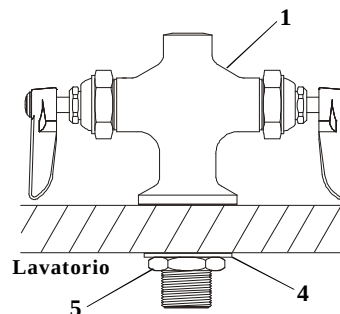

5. Instale las partes No.4 y No.5 en la parte No.1, aprete la parte No.5 y atornille la parte No.14 sobre la parte No.1, apretándolo a mano, asegurándose que alinee las clavijas sobre No.002898-40 con los huecos que le corresponden a la base de la parte No.1.

Nota: Si 002898-40 y la parte No.1 son unidas correctamente, la 002898-40 no se moverán o torcerán aunque sea intentado.

6. Apreté la parte No.14 con una llave de 1-15/16".
7. Conecte las líneas de entrada e inspeccione por filtraciones.


CUIDADO: Cierre la canilla desde la base, cuando no esta en uso.

Instructions Générales


Installation du Robinet:

1. Couper l'alimentation d'eau et purger la tuyauterie. Percer un trou d'environ 1-1/4" de diamètre dans le support ou vous installer le N°.1.

2. Déserrer le N°.14 avec une clef de 1-15/16" et séparer les deux parties.

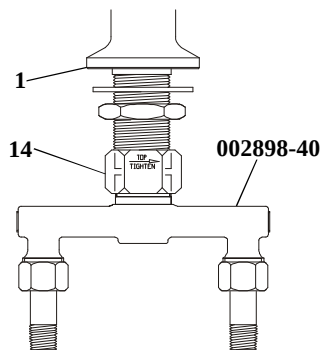


Noter: démontage, ne tourner plus le N°.14.

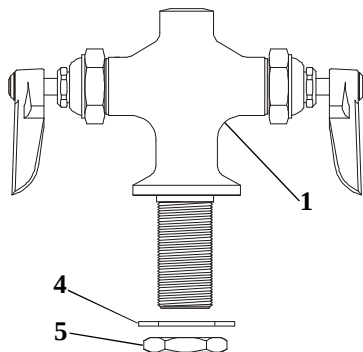

3. Enlever le N°.5 et le N°.4 du N°.1.

4. Mettre le N°.1 dans le trou de l'évier, aligner les côtés chauds et froids parallèles au tuyau du robinet.

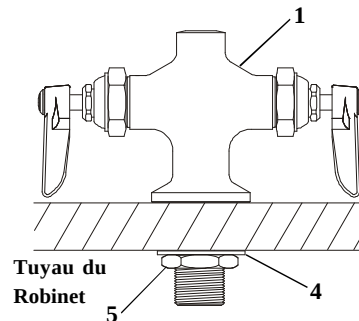

5. Installer le N°.4 et le no.5 sur le N°. 1 et serrer le N°.5. Visser le N°.14 sur le N°.1 en serrant à la main et en alignant les deux chevilles du 002898-40 avec les trous correspondant de la base du N°.1.

Noter: Si le no.002898-40 et le N°.1 sont bien emboîtés le 002898-40 ne bougera pas et ne tournera pas.

6. Serrer le N°.14 avec une clef de 1-15/16".

7. Attacher la tuyauterie d'alimentation et assurez-vous qu'il n'y a pas de fuites.


ATTENTION: Couper l'alimentation d'eau à la base lorsque l'appareil n'est pas utilisé.

Allgemeine Anleitungen


Wasserhahninstallation:

1. Wasser abstellen und Wasserleitungen entleeren. In die Abdeckplatte des Waschtisches ein ungefähr 1-1/4" großes Loch bohren, in das Nr. 1 installiert wird.

2. Nr. 14 mit einem 1-15/16" Schraubenschlüssel losdrehen und die beiden Teile auseinandernehmen.

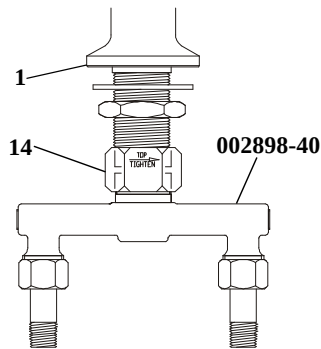


Anmerkung: Nr. 14 nach dem Auseinandernehmen nicht weiter drehen.

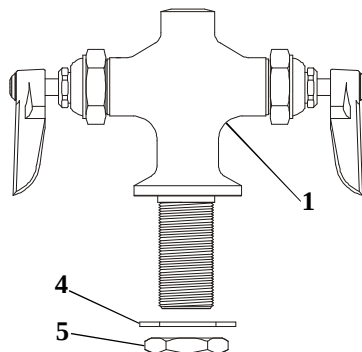

3. Nr. 5 und Nr. 4 von Nr. 1 entfernen.

4. Nr. 1 durch das Loch im Waschbecken führen, Warm- und Kaltwasser- armatur parallel zur Waschbeckenkante anordnen.

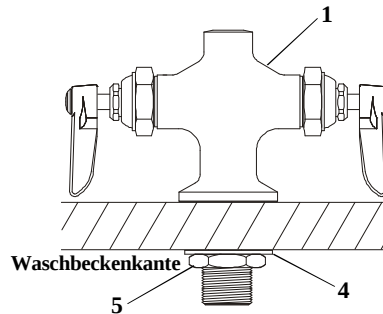

5. Nr. 4 und Nr. 5 auf Nr. 1 installieren, Nr. 5 festschrauben. Nr. 14 auf Nr. 1 schrauben, mit der Hand festschrauben, sicherstellen, daß die Stifte auf **002898-40** mit den entsprechenden Löchern am Fuß von Nr. 1 angeordnet sind.

Anmerkung: Falls 002898-40 und Nr. 1 richtig miteinander verbunden sind, läßt sich 002898-40 auf Druck weder bewegen noch verdrehen.

6. Nr. 14 mit einem 1-15/16" Schraubenschlüssel festdrehen.

7. Die Wasserleitungen anschließen und auf Dichtigkeit überprüfen.

VORSICHT: Wasser am Hauptahn abdrehen, wenn die Armatur nicht benutzt wird.

RELATED T&S BRASS PRODUCT LINE



**B-0111
Pre-Rinse**



**B-20K
Parts Kit**



**B-0220-LN
Deck Mixing
Faucet**

T&S BRASS AND BRONZE WORKS, INC.

A firm commitment to application-engineered plumbing products

2 Saddleback Cove, P.O. Box 1088,
Travelers Rest, SC 29690

Phone: (864) 834-4102

Fax: (864) 834-3518

E-mail: tsbrass@tsbrass.com

T & S Brass-Europe
'De Veenhoeve'

Oude Nieuwveenseweg 84

2441 CW Nieuwveen

The Netherlands



RELIABILITY BUILT IN™