 







Installation Instructions for the WSA-1

<p>STEP 1</p>  <p>Locate filter inside the refrigerator. First slowly turn the cartridge 1/4 turn to the left and remove.</p>	<p>STEP 2</p>  <p>Remove all packaging, apply date label if required as a reminder to replace the filter within 6 months and remove the protective sticker from the top.</p>
<p>STEP 3</p>  <p>Check o-ring is flat in top of filter, fill filter with water. Insert filter into refrigerator and turn 1/4 to 1/2 turn to the right - label in front. Do not overtighten.</p>	<p>STEP 4</p> <p>Reset Water Filter</p>  <p>Run water for 5 minutes through the dispenser to flush the filter. Reset the light if needed by holding down both the DISPENSER LOCK and AUTO LIGHT buttons for 4 seconds, until FILTER STATUS light begins to flash.</p>

The filter cartridge should be replaced every 6 months or sooner if the flow of water to the dispenser or ice maker decreases.