INSTALLATION INSTRUCTIONS

POINT-OF-USE AIR-GAP FOR REVERSE OSMOSIS (RO) WATER TREATMENT SYSTEMS

Wall Mounted AIRGAP[™] – Model 3001

SPECIFICATIONS

Location: Above RO system module and rinse

water drain point.

Air Gap: 1" of free flow.

Water Flow: 0.5 gallons per minute maximum.

Inlet Tubing: ¼" O.D. polyethylene.
Outlet Tubing: ¾" O.D. polyethylene.

INSTALLATION INSTRUCTIONS

Important: The AIRGAP[™] must be installed vertically.

1. Select location on wall or cabinet side panel.

Note: Location must provide sufficient space to route the tubing without sharp turns. Sharp

turns tend to flex and deform the tubing,

reducing its flow capacity.

Item callouts refer to Figure 1

- 2. Mount the bracket (Item 1) to the selected location according to the surface finish:
 - a. Rough or unfinished wood, use two screws (Item 2).
 - Smooth, use double-stick tape (Item 3). Surface must be clean
- Install Tubes onto AIRGAPTM body (Item 4).

Caution: Do not use boiling water in this procedure. Use hot water from the sink faucet only.

- a. Soak one end of each tube in hot water until the plastic becomes pliant.
- b. Push the ¼" tube (Item 5) all the way onto the small barb. Push the ¾" tube (Item 6) all the way onto the large barb.

- Attach the AIRGAPTM (Item 4) to the bracket (Item 1). Gently press the tubes into their clips. Press the ¼" tube (Item 5) into the small clip and the ¾" tube (Item 6) into the large clip.
- 5. Connect the ¼" tube (Item 5) to the system and the ¾" tube (Item 6) to the drain.

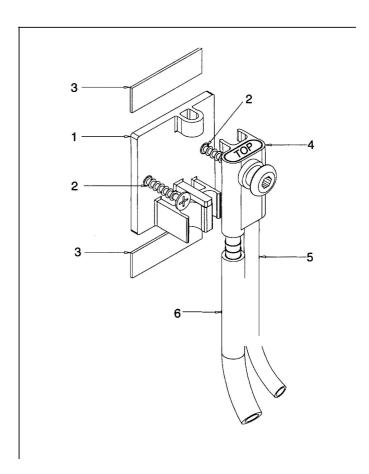


Figure 1: Component Locator, Wall-Mounted Air Gap