


Directions for Use

Insert this element into the housing as described in the user's manual which accompanied the refrigerator at the time of sale. Condition the filtering system by running water through the dispenser for 3 minutes before using. Some models may have a PureSource™ Filter replacement signal reset button. After changing filter, hold the dispenser button down 3 to 15 seconds to reset the signal. The filter should be changed 6 months from the date of installation.

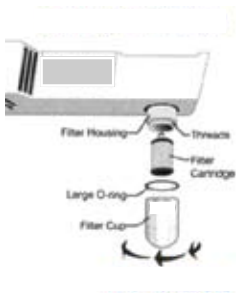

Operating Specifications

- Maximum operating temperature 100°F.
- Minimum operating temperature 33°F.
- Max/Min working pressure.....100 PSIG/20 PSIG.
- Flow rate 0.50 GPM.
- Rated capacity.....6-9 Months or 400 Gallons
Whichever comes first