


Disposal Connection Drain Line Adapter For Dishwashers and Reverse Osmosis Systems

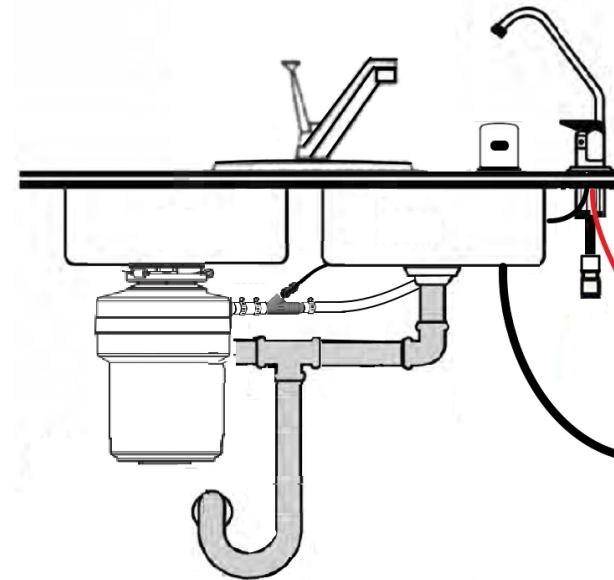

The dishwasher - drain line adapter makes for an easy RO drain line connection when you have an existing dishwasher drain line installed to the disposal. This adapter eliminates the need for a drain saddle type connection. Available for 3/8" or 1/4" RO discharge lines

Distributed By:



2299 Ridge Rd., Greenville, SC
P:888.859.1188 · F:864.284.1819
NeoLogicSolutions.com • Info@NeoLogicSolutions.com

All rights and illustrations reserved. Manufacturer reserves the right to make changes without notice. ©2017 NeoLogic Solutions.

Distributed By:



2299 Ridge Rd., Greenville, SC
P:888.859.1188 · F:864.284.1819
NeoLogicSolutions.com • Info@NeoLogicSolutions.com

All rights and illustrations reserved. Manufacturer reserves the right to make changes without notice. ©2017 NeoLogic Solutions.

Parts Included:




Qty Part

- 1 Drain line adapter with stem connector
- 1 Hose coupler
- 2 Stainless Steel worm clamps
- 1 Union connector







Installation Steps:

1. Turn the power supply off to the disposal by unplugging or turning off the circuit breaker.
2. Disconnect the dishwasher drain hose from the disposal by removing or loosening the hose clamp. Twist the hose back and forth to walk it off of the barbed connection on the disposal.
3. The adapter has 3 step-down sizes to accommodate a variety of dishwasher discharge hoses. Determine which section works best by sliding it into the open end of the hose. If the middle or largest barb fits best, cut off the smaller section(s) with a hack saw.
4. Inspect the inside of the hose barb connection on the disposal and if necessary, clean the inside with a flat blade screwdriver to remove any build-up from the dishwasher.

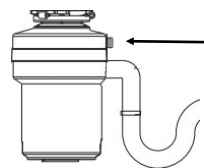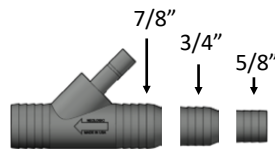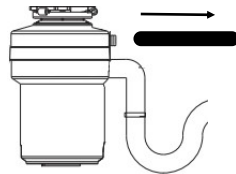

Installation Steps:

5. Install the hose coupler on to the hose barb connection on the disposal. Slide the stainless worm gear hose clamps on to the hose coupler. Make sure the adjustment nuts are in a direction that is reachable when you are ready to tighten.
6. Insert the drain line adapter with embossed arrow pointing towards the disposal into the hose coupler until the remaining inch is firmly seated. Orient the wye branch in a vertical position to receive the drain line from the RO. Tighten both hose clamps so that adapter is secure.
7. Trim and attach the hose from the dishwasher to the other side of the adapter that has been trimmed to accept the best fit. Make sure that the tube and adapter end are slightly elevated so that water flows to the disposal and tube does not dip below the adapter. See Note below* Slide the hose clamp up and tighten.
8. Connect the drain line from the RO system. It is very important that the drain line from the RO air gap be as straight as possible to the stem of the adapter. Line up the drain tube with the stem and cut the tube. Using the union connector in the kit, attach to the RO drain line, then push the other side of the connector onto the stem.

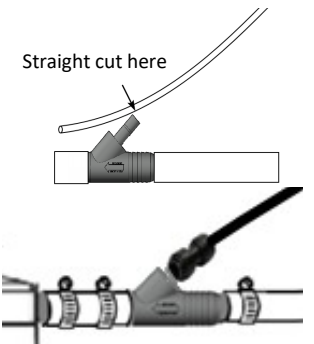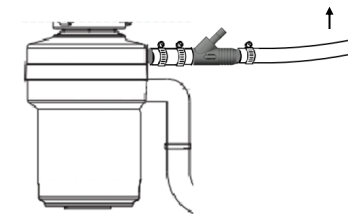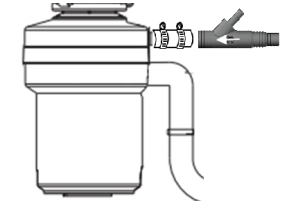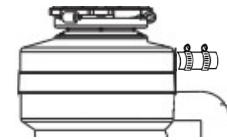

*Note: Using the tautness of the dishwasher hose, keep the tail of the adapter slightly elevated to enhance proper drainage and a clog free installation.