










DLA-TAG PARTS LIST & INSTALLATION PROCEDURES


LIST OF PARTS ENCLOSED		
1	Main Body	
1	Inner Cap	
1	Compression Top Nut	
1	Deck Mount Middle Nut	
1	Undercounter Bottom Nut	
1	Chrome Cover Cap	
1	Deck Gasket	
1	Inner Cap Custom O-Ring	
1	Barb or Push-In Adapter	

INSTALLATION PROCEDURES


(Average time to install is typically the same as conventional dishwasher airgaps)

Step One:
Disassemble the TAG.


Note:
it is not necessary to remove the Inner Cap or Bottom Nut

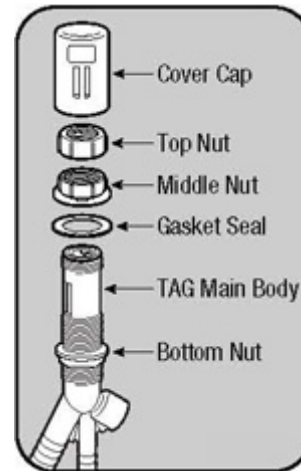

Step Two:
Install the TAG onto sink or counter top.

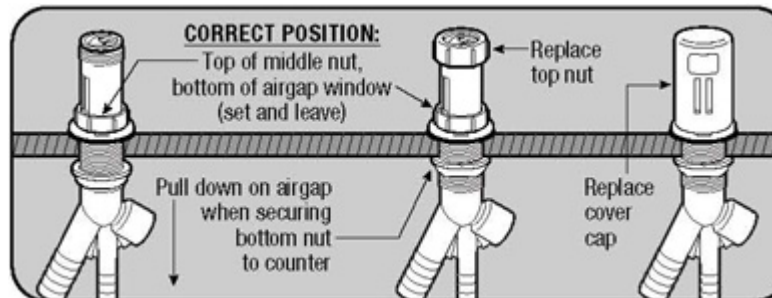

Step Three:
Connect the two inlet hoses and/or tubing (A&B), and the drain hose (C) to the TAG.

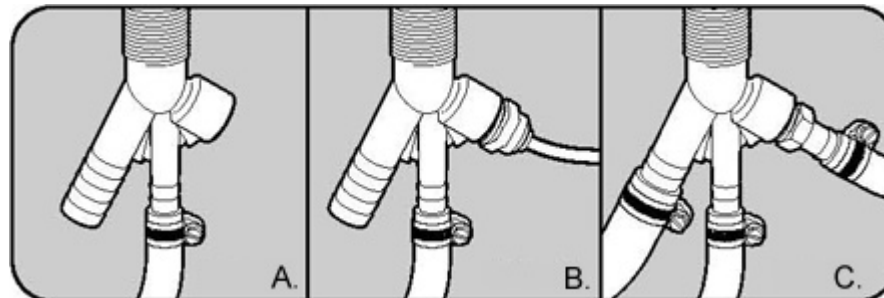

Step Four:
Connect the
drain hose to
the disposal or
branch tailpiece.

