

GE Smartwater Flow Control Replacement




- GXRM10
- GXRM10BL
- GXRV10ABL01

Step 1

Unscrew the black 1/4" line from the drain outlet (brine) fitting on the bottom of the membrane housing. Remove flow control with clean knife edge.

Step 2

Reattach tubing to the membrane housing brine outlet

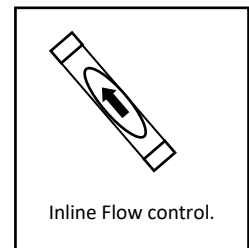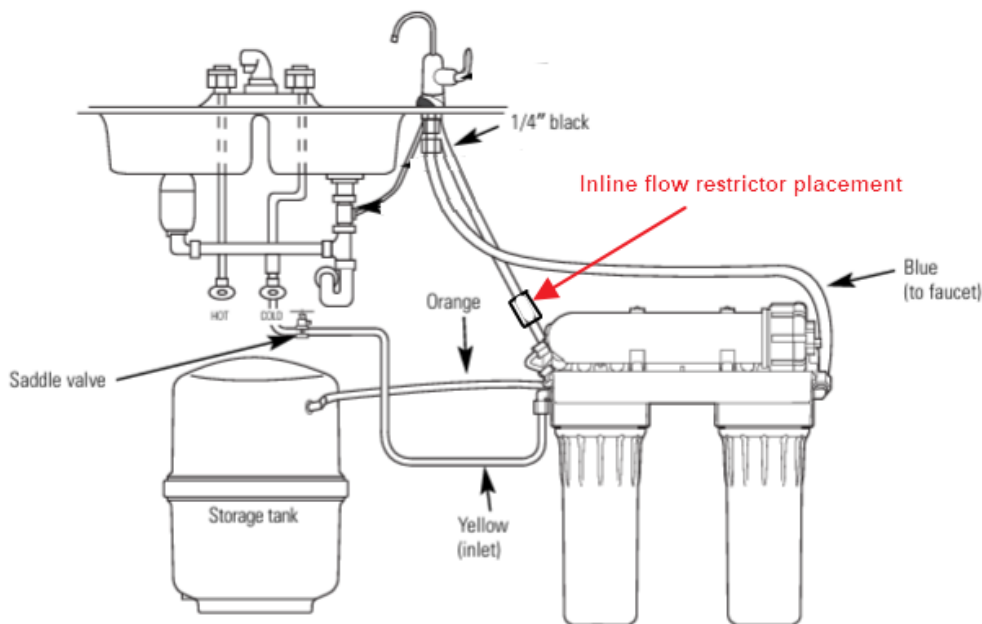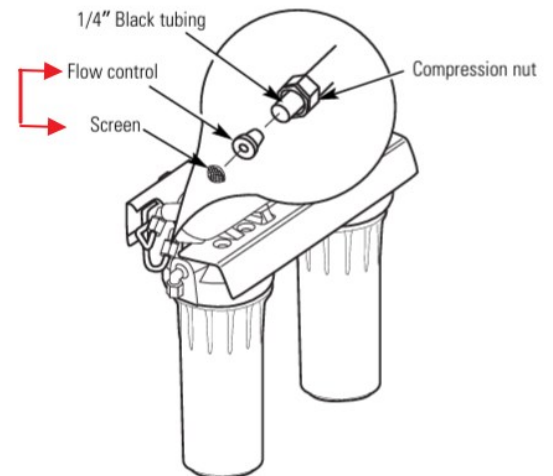

Step 3

Cut the 1/4 black tubing 2 or 3 inches from the brine outlet fitting. Make sure the cut is straight and clean.

Step 4

With the arrow on the flow control pointing in the direction away from the RO system, plug the ends of the newly cut tubing into the flow control.

- Push the tube into the fitting all the way to tube stop. (measure 3/4" up tube and make a line. Push tubing in so that line is even or below the collet)
- Pull it to check it is secure and test the system for leaks before use

