




# G.A. Murdock, Inc.

Phone: 800.568.7565 or 605.256.9632  
Fax: 800.568.4301 or 605.256.9682  
Email: sales@gamurdock.com  
Internet: www.gamurdock.com

## EZ Faucet Adapter Installation Instructions

**(For cold water use only)**

1. Depressurize and disconnect existing flexible supply line from cold water threaded faucet shank.
2. Verify black gasket is positioned at the base of female threads of EZ Faucet Adapter and collet is in place.
3. Rotate female threads of EZ Faucet Adapter counter-clockwise onto 1/2" Male NPSM threads on the faucet shank until Adapter drops onto threads, then thread clockwise until finger tight and turn an additional 180-360°.
4. Rotate Flexible Supply line nut counter-clockwise onto 1/2" Male NPSM threads on the EZ Faucet Adapter until nut drops onto threads, then thread clockwise until finger tight and turn an additional 180-360°. Use only rubber or plastic ferrule in supply line nut, not for use with metal ferrule.
5. Cut the tubing squarely and if using plastic tubing, ensure that the cut has not made the tube out of round and that the tube has a smooth outside diameter without any burrs or score marks.
6. Push the tubing through the collet and dual o-rings until it bottoms out against the tube stop, approx. 3/4" insertion depth. The collet holds the tube in place and the dual o-rings provide a leak resistant seal.
7. Push and pull the tubing toward and away from the fitting to ensure that it has been installed properly.
8. Re-pressurize the line and test and inspect the installation for any leaks.

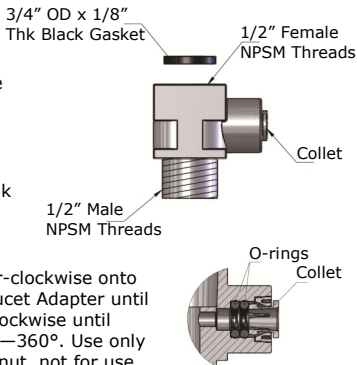

**DO NOT** use Teflon tape or any sealing material to install this product.