

INSTALLATION INSTRUCTIONS



1. Remove 29.3" of downspout from where the Clean Rain™ is to be situated. Ensure all edges are clean and smooth.
2. Remove the cap and use snips to remove a section to fit the downspout.
3. Remove the cover by flexing outwards at the top.
4. Fit the correct downspout adaptor to the bottom of the Clean Rain™.
5. Slide the cap up the top section of downspout and hold temporarily in place.
6. Install the Clean Rain™ by positioning it securely on the bottom section of downspout.
7. Screw the top of the Clean Rain™ in position through the screw slots provided. Ensure appropriate screws and anchors (if required) are used.
8. Check the placement of the Vibrating Screen. It must sit behind and below the front face (refer figure 1).
9. Insert the Leaf Slide into slot holes (refer figure 2).
10. Re-install the front cover.
11. Slide the cap back down the downspout until it sits securely on top of the Clean Rain™ unit.

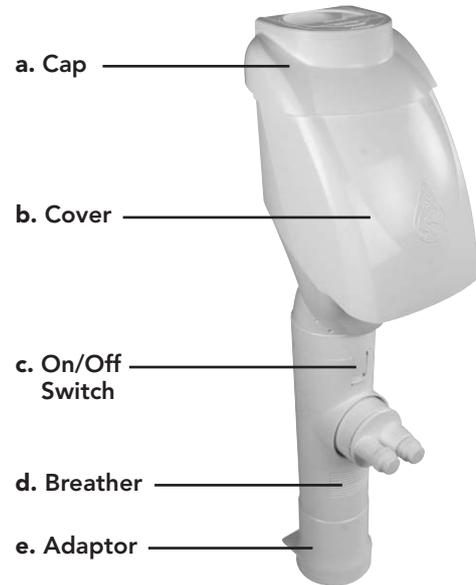


Figure 1.


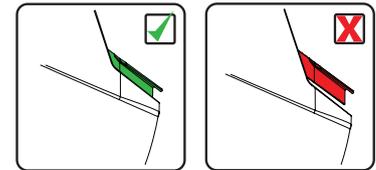


Figure 2.

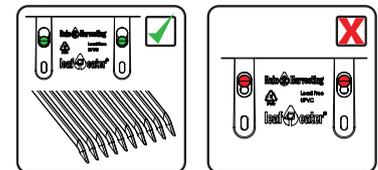

ON/OFF

The Clean Rain™ can be turned off so that no water is diverted. To do this simply flick the switch on the front of the Clean Rain™ and in the next rainfall event all water will be diverted to stormwater.

MAINTENANCE

The Clean Rain™ is mostly self-cleaning, however it may require occasional maintenance in order to keep it functioning optimally.

RAIN HEAD – The leaf slide and vibrating screen can both be removed when the cap and cover are off by lifting up and out. If cleaning is required simply hose or brush off any debris. Replace as per figure 1 and 2.

OUTLET – The outlet has an internal mosquito barrier that prevents any mosquitoes from entering the tank. To clean simply remove the outlet by holding the unit in one hand and with a firm pull remove the outlet adaptor. The mosquito barrier sits within the outlet and can be removed by hand.

FIRST FLUSH – The Smart Sense™ valve may require the occasional clean to remove any build-up of sediment. To clean remove the Clean Rain™ from the wall and take the bottom adaptor off the unit. To maintain optimum performance the washers based at the bottom of the Smart Sense™ valve should be replaced approximately every 12 to 24 months.

Please register your Clean Rain™ product online at www.rainharvesting.com for your replacement reminder.

