


Connect Tubes To The RO Faucet

This RO faucet is equipped with quick connect tube fittings. To connect a tube, push it **firmly** into the fitting until fully seated. Approximately 3/4" of the tube will be inserted.

Fitting Color / Tube Coding:
 1 - BLUE - Purified Water
 2 - BLACK - To Drain Pipe
 3 - RED - From System Drain

1. Connect **BLUE** tube (Purified Water from System)
2. Connect 3/8" **BLACK** tube (Drain Water to Drain Pipe)
3. Connect 1/4" **RED** tube (Drain Water from System)

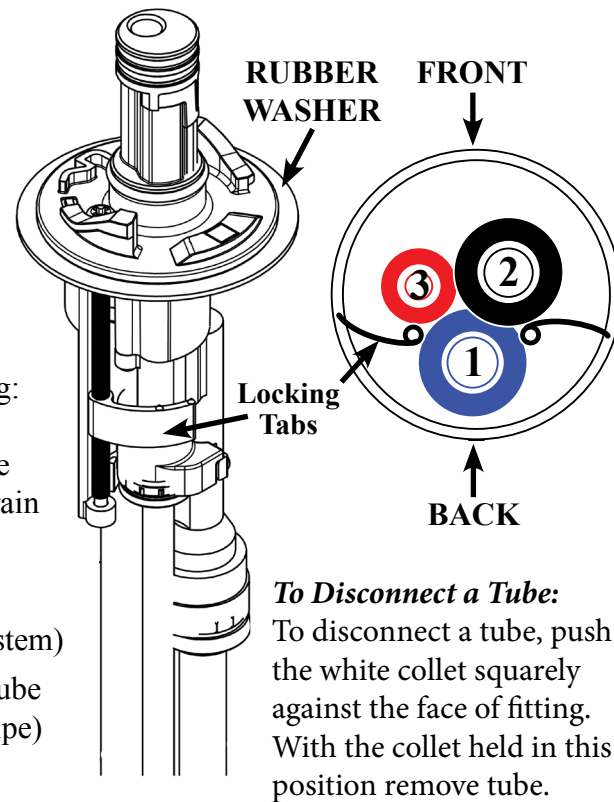


To Disconnect a Tube:
 To disconnect a tube, push the white collet squarely against the face of fitting. With the collet held in this position remove tube.

Mount The RO Faucet

A 1.25" - 1.75" mounting hole is required for faucet installation.

4. Make sure the Locking Tabs are "closed". Feed the tubes and the lower faucet assembly through the mounting hole in the sink. Test fit faucet placement.

Note: Make sure that the lower faucet assembly is seated properly inside of the rubber washer groove.

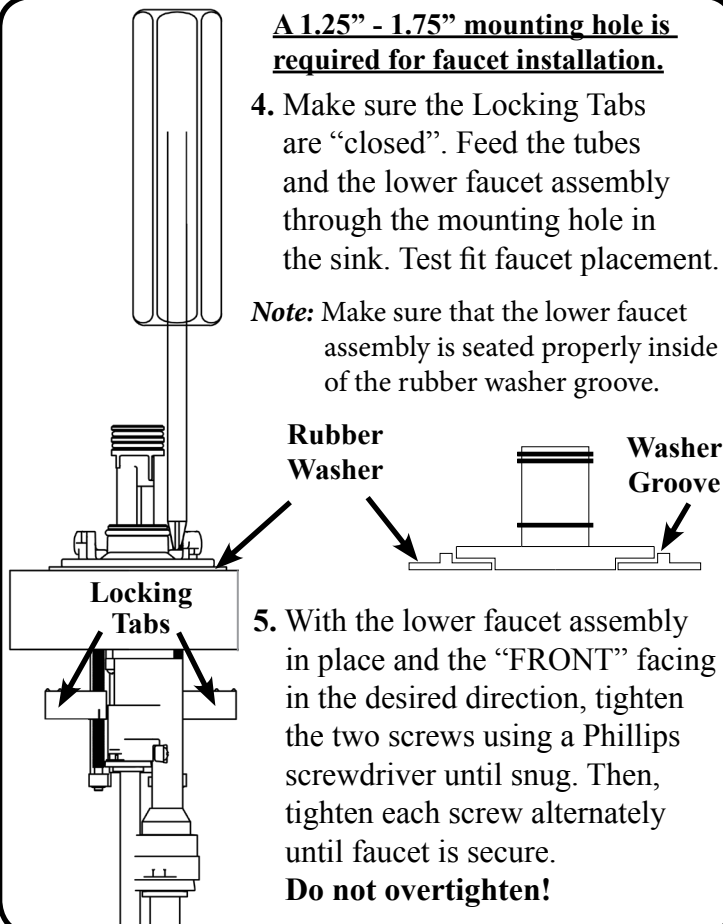


5. With the lower faucet assembly in place and the "FRONT" facing in the desired direction, tighten the two screws using a Phillips screwdriver until snug. Then, tighten each screw alternately until faucet is secure. **Do not overtighten!**

Assemble Faucet

6. Align the release button on the back of the upper faucet assembly approximately 45° counter clockwise off the **back** of the lower faucet assembly.
7. Press the upper faucet assembly **firmly** on-to the lower faucet assembly and twist clockwise until locked into place.
8. Remove battery cover on faucet handle, pull tab and replace battery cover. The monitor will flash red and blue once activated.

To Remove Upper Assembly:
 Press in the release button and twist upper faucet assembly counter-clock wise.*

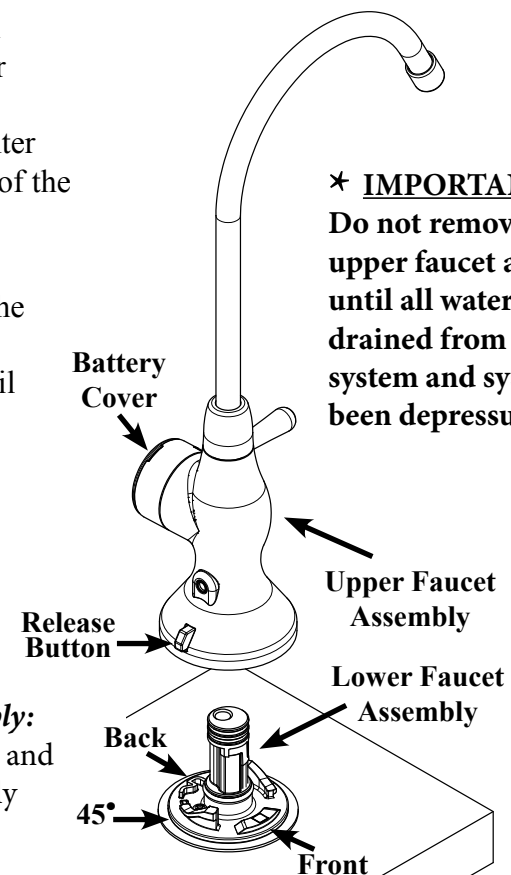

*** IMPORTANT:**
 Do not remove the upper faucet assembly until all water has been drained from the system and system has been depressurized.