

Specifications

Model Number:	10-0518A
Input Voltage:	120 VAC
Frequency:	50/60 Hz.
Designed For:	Bio-Logic® Models BIO-1.5 and BIO-3
Certifications:	CE / UL #E191525
Size:	4.92" x 2.4" x 1.38" (125 x 60 x 35 mm)
Weight:	10 oz. (0.3 kg)
Mounting:	Slotted Mounting Tabs
Special Features:	Green & Red LED, Buzzer if lamp not working



Lamp-out Protection

If power is applied to the ballast without a lamp connected to the circuit or if the lamp fails, the ballast's lamp-out protection will prevent the ballast from operating, and a red LED light will illuminate and audio alarm will sound. **To reset:** disconnect the ballast from power and reconnect or replace the lamp. **The ballast must remain disconnected from power for (2) minutes to reset.** After 2 minutes restore input power, ballast should resume proper operation.



WARNING: The equipment that this ballast is used with requires connection to a known good ground. It is the User's responsibility to insure that their equipment is properly grounded in compliance with the National Electrical Code and any applicable local codes. Equipment wiring and hook up should be performed by a qualified, licensed electrician. Failure to comply with this requirement could result in serious injury or death.

Grounding Kits are available. Please contact the factory with any questions.



10-0518A **CE**
UL #E191525

Electronic Ballast for T5L/4 lamps

Preheat GPH212 thru GPH843

INPUT VOLTAGE	INPUT CURRENT	LAMP POWER	LAMP CURRENT
120v 50/60Hz	0.31-0.7A	10-40W	425mA Approx.

Green and Red LED Indicate Status.
Alarm Sounds if the Lamp is Not Working.


info@ultraviolet.com
631.273.0500 • ultraviolet.com

ATLANTIC **ULTRAVIOLET**
CORPORATION®
Hauppauge, NY • USA

The information and recommendations contained in this publication are based upon data collected by the Atlantic Ultraviolet Corporation® and are believed to be correct. However, no guarantee or warranty of any kind, expressed or implied, is made with respect to the information contained herein. Specifications and information are subject to change without notice.

10-0518A - Surelite™ Electronic Ballast

Connections

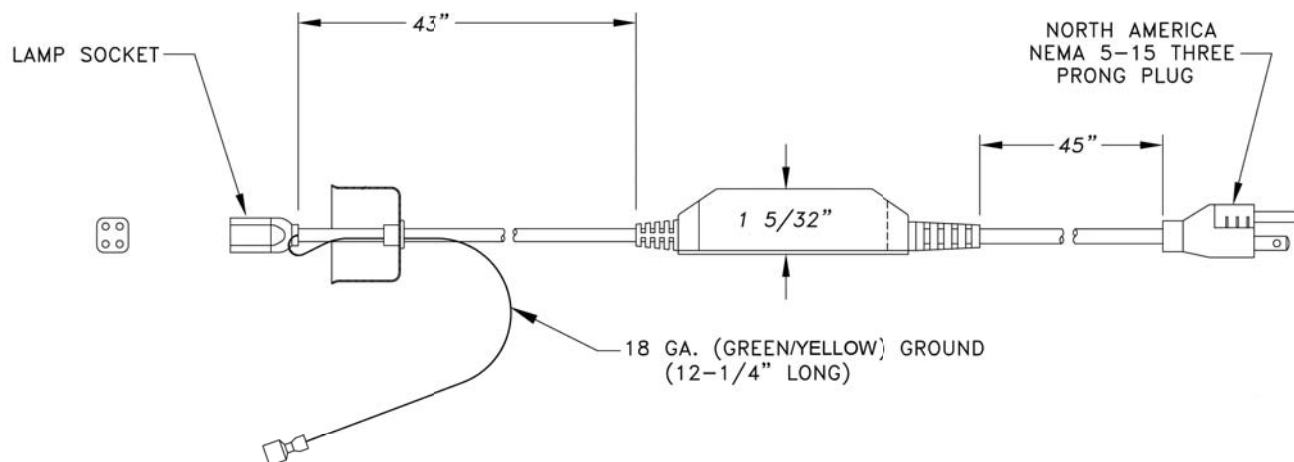

The information and recommendations contained in this publication are based upon data collected by the Atlantic Ultraviolet Corporation® and are believed to be correct. However, no guarantee or warranty of any kind, expressed or implied, is made with respect to the information contained herein. Specifications and information are subject to change without notice.