



Fleck 2510 & 2510 Econominder

Service Manual

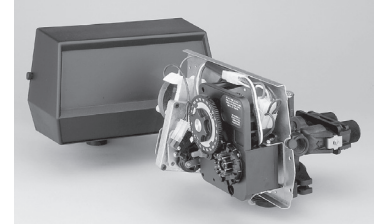


TABLE OF CONTENTS

JOB SPECIFICATION SHEET	1
INSTALLATION	2
START-UP INSTRUCTIONS	2
3200 TIMER SETTING PROCEDURE	3
3210 TIMER SETTING PROCEDURE	4
3200, 3210, 3220, 3230 REGENERATION CYCLE SETTING PROCEDURE	5
3200 TIME CLOCK TIMER ASSEMBLY	6
3210 METER DELAYED TIMER ASSEMBLY	7
3220 METER IMMEDIATE TIMER ASSEMBLY	8
POWERHEAD ASSEMBLY (ENVIRONMENTAL)	9
MANUAL POWERHEAD ASSEMBLY	10
CONTROL VALVE ASSEMBLY	11
SOFTENER 7 FILTER CONVERSION KITS	12
METER ASSEMBLY	13
1600 BRINE SYSTEM ASSEMBLY	14
1650 BRINE SYSTEM	15
BYPASS VALVE ASSEMBLY (PLASTIC)	16
BYPASS VALVE ASSEMBLY (METAL)	17
2300 SAFETY BRINE VALVE	18
2310 SAFETY BRINE VALVE	19
SEAL & SPACER TOOLS & REPLACEMENT	20
GENERAL SERVICE HINTS FOR METER CONTROL	21
TROUBLESHOOTING	22
FLOW DATA & INJECTOR DRAW RATES	23
WIRING	24
SERVICE ASSEMBLIES	25

JOB SPECIFICATION SHEET

Job Number: _____
 Model Number: _____
 Water Hardness: _____ ppm or gpg
 Capacity Per Unit: _____
 Mineral Tank Size: _____ Diameter: _____ Height: _____
 Salt Setting per Regeneration: _____

1. Type of Timer:

- A. 7 Day or 12 Day
- B. Meter Initiated

2. Downflow: Upflow Upflow Variable

3. Meter Size:

- A. 3/4" Std Range (125 - 2,100 gallon setting)
- B. 3/4" Ext Range (625 - 10,625 gallon setting)
- C. 1" Std Range (310 - 5,270 gallon setting)
- D. 1" Ext Range (1,150 - 26,350 gallon setting)
- E. 1-1/2" Std Range (625 - 10,625 gallon setting)
- F. 1-1/2" Ext Range (3,125 - 53,125 gallon setting)
- G. 2" Std Range (1,250 - 21,250 gallon setting)
- H. 2" Ext Range (6,250 - 106,250 gallon setting)
- I. 3" Std Range (3,750 - 63,750 gallon setting)
- J. 3" Ext Range (18,750 - 318,750 gallon setting)
- K. Electronic _____ Pulse Count _____ Meter Size _____

4. System Type:

- A. System #4: 1 Tank, 1 Meter, Immediate, or Delayed Regeneration
- B. System #4: Time Clock
- C. System #4: Twin Tank
- D. System #5: 2-5 Tanks, Interlock Mechanical
2-4 Tanks, Interlock Electronic
Meter per unit for Mechanical and Electronic
- E. System #6: 2-5 Tanks, 1 Meter, Series Regeneration, Mechanical
2-4 Tanks, 1 Meter, Series Regeneration, Electronic
- F. System #7: 2-5 Tanks, 1 Meter, Alternating Regeneration,
Mechanical
2 Tanks only, 1 Meter, Alternating Regeneration,
Electronic
- G. System #9: Electronic Only, 2-4 Tanks, Meter per Valve, Alternating
- H. System #14: Electronic Only, 2-4 Tanks, Meter per Valve. Brings
units on and offline based on flow.

5. Timer Program Settings:

- A. Backwash: _____ Minutes
- B. Brine and Slow Rinse: _____ Minutes
- C. Rapid Rinse: _____ Minutes
- D. Brine Tank Refill: _____ Minutes
- E. Pause Time: _____ Minutes
- F. Second Backwash: _____ Minutes

6. Drain Line Flow Control: _____ gpm

7. Brine Line Flow Controller: _____ gpm

8. Injector Size#: _____

9. Piston Type:

- A. Hard Water Bypass
- B. No Hard Water Bypass

INSTALLATION

Water Pressure

A minimum of 20 pounds (1.4 bar) of water pressure is required for regeneration valve to operate effectively.

Electrical Facilities

An uninterrupted alternating current (A/C) supply is required. Note: Other voltages are available. Please make sure your voltage supply is compatible with your unit before installation.

Existing Plumbing

Condition of existing plumbing should be free from lime and iron buildup. Piping that is built up heavily with lime and/or iron should be replaced. If piping is clogged with iron, a separate iron filter unit should be installed ahead of the water softener.

Location Of Softener And Drain

The softener should be located close to a drain to prevent air breaks and back flow.

BY-PASS VALVES


Always provide for the installation of a by-pass valve if unit is not equipped with one.

CAUTION Water pressure is not to exceed 125 psi (8.6 bar), water temperature is not to exceed 110°F (43°C), and the unit cannot be subjected to freezing conditions.

Installation Instructions

1. Place the softener tank where you want to install the unit making sure the unit is level and on a firm base.
2. During cold weather, the installer should warm the valve to room temperature before operating.
3. All plumbing should be done in accordance with local plumbing codes. The pipe size for residential drain line should be a minimum of 1/2" (13 mm). Backwash flow rates in excess of 7 gpm (26.5 Lpm) or length in excess of 20' (6 m) require 3/4" (19 mm) drain line. Commercial drain lines should be the same size as the drain line flow control.
4. Refer to the dimensional drawing for cutting height of the distributor tube. If there is no dimensional drawing, cut the distributor tube flush with the top of the tank.
5. Lubricate the distributor O-ring seal and tank O-ring seal. Place the main control valve on tank. Note: Only use silicone lubricant.
6. Solder joints near the drain must be done prior to connecting the Drain Line Flow Control fitting (DLFC). Leave at least 6" (15 cm) between the DLFC and solder joints when soldering pipes that are connected on the DLFC. Failure to do this could cause interior damage to the DLFC.
7. Teflon tape is the only sealant to be used on the drain fitting. The drain from twin tank units may be run through a common line.
8. Make sure that the floor is clean beneath the salt storage tank and that it is level.
9. Place approximately 1" (25 mm) of water above the grid plate. If a grid is not utilized, fill to the top of the air check (Figure 1) in the salt tank. Do not add salt to the brine tank at this time.
10. On units with a by-pass, place in by-pass position. Turn on the main water supply. Open a cold soft water tap nearby and let run a few minutes or until the system is free from foreign material (usually solder) that may have resulted from the installation. Once clean, close the water tap.

11. Slowly place the by-pass in service position and let water flow into the mineral tank. When water flow stops, slowly open a cold water tap nearby and let run until the air is purged from the unit.
12. Plug unit into an electrical outlet. Note: All electrical connections must be connected according to local codes. Be certain the outlet is uninterrupted.

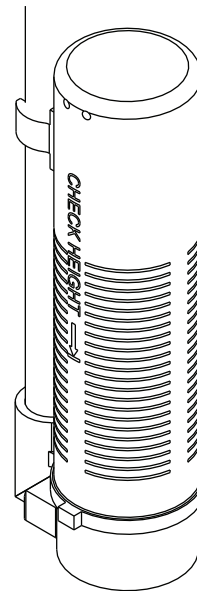

60002 Rev E

Figure 1 Residential Air Check Valve

START-UP INSTRUCTIONS

The water softener should be installed with the inlet, outlet, and drain connections made in accordance with the manufacturer's recommendations, and to meet applicable plumbing codes.

1. Turn the manual regeneration knob slowly in a clockwise direction until the program micro switch lifts on top of the first set of pins. Allow the drive motor to move the piston to the first regeneration step and stop. Each time the program switch position changes, the valve will advance to the next regeneration step. Always allow the motor to stop before moving to the next set of pins or spaces.
NOTE: For electronic valves, please refer to the manual regeneration part of the timer operation section. If the valve came with a separate electronic timer service manual, refer to the timer operation section of the electronic timer service manual.
2. Position the valve to backwash. Ensure the drain line flow remains steady for 10 minutes or until the water runs clear (see above).
3. Position the valve to the brine / slow rinse position. Ensure the unit is drawing water from the brine tank (this step may need to be repeated).
4. Position the valve to the rapid rinse position. Check the drain line flow, and run for 5 minutes or until the water runs clear.
5. Position the valve to the start of the brine tank fill cycle. Ensure water goes into the brine tank at the desired rate. The brine valve drive cam will hold the valve in this position to fill the brine tank for the first regeneration.
6. Replace control box cover.
7. Put salt in the brine tank.

NOTE: Do not use granulated or rock salt.

3200 TIMER SETTING PROCEDURE

How To Set Days On Which Water Conditioner Is To Regenerate (Figure 2)

Rotate the skipper wheel until the number "1" is at the red pointer. Set the days that regeneration is to occur by sliding tabs on the skipper wheel outward to expose trip fingers. Each tab is one day. Finger at red pointer is tonight. Moving clockwise from the red pointer, extend or retract fingers to obtain the desired regeneration schedule.

How To Set The Time Of Day



1. Press and hold the red button in to disengage the drive gear.
2. Turn the large gear until the actual time of day is at the time of day pointer.
3. Release the red button to again engage the drive gear.

How To Manually Regenerate Your Water Conditioner At Any Time

1. Turn the manual regeneration knob clockwise.
2. This slight movement of the manual regeneration knob engages the program wheel and starts the regeneration program.
3. The black center knob will make one revolution in the following approximately three hours and stop in the position shown in the drawing.
4. Even though it takes three hours for this center knob to complete one revolution, the regeneration cycle of your unit might be set for only one half of this time.
5. In any event, conditioned water may be drawn after rinse water stops flowing from the water conditioner drain line.

How to Adjust Regeneration Time

1. Disconnect the power source.
2. Locate the three screws behind the manual regeneration knob by pushing the red button in and rotating the 24 hour dial until each screw appears in the cut out portion of the manual regeneration knob.
3. Loosen each screw slightly to release the pressure on the time plate from the 24 hour gear.
4. Locate the regeneration time pointer on the inside of the 24 hour dial in the cut out.
5. Turn the time plate so the desired regeneration time aligns next to the raised arrow.
6. Push the red button in and rotate the 24 hour dial. Tighten each of the three screws.
7. Push the red button and locate the pointer one more time to ensure the desired regeneration time is correct.
8. Reset the time of day and restore power to the unit.

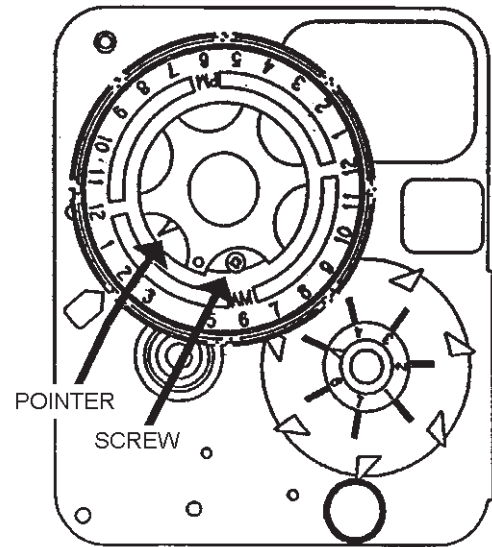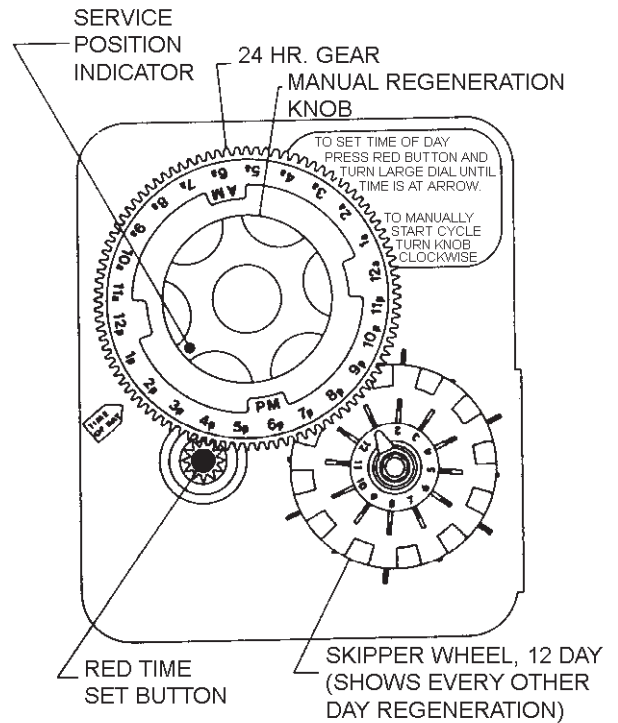

3200 ADJUSTABLE REGENERATION TIMER

IMPORTANT!
SALT LEVEL MUST ALWAYS BE ABOVE
WATER LEVEL IN BRINE TANK

61502-3200 Rev A

Figure 2

3210 TIMER SETTING PROCEDURE

Typical Programming Procedure

Calculate the gallon capacity of the system, subtract the necessary reserve requirement and set the gallons available opposite the small white dot on the program wheel gear (Figure 3).

NOTE: Drawing shows 8,750 gallon setting. The capacity (gallons) arrow (15) shows zero gallons remaining. The unit will regenerate tonight at the set regeneration time.

How To Set The Time Of Day

1. Press and hold the red button in to disengage the drive gear.
2. Turn the large gear until the actual time of day is opposite the time of day pointer.
3. Release the red button to again engage the drive gear.

How To Manually Regenerate Your Water Conditioner At Any Time


1. Turn the manual regeneration knob clockwise.
2. This slight movement of the manual regeneration knob engages the program wheel and starts the regeneration program.
3. The black center knob will make one revolution in the following approximately three hours and stop in the position shown in the drawing.
4. Even though it takes three hours for this center knob to complete one revolution, the regeneration cycle of your unit might be set for only one half of this time.
5. In any event, conditioned water may be drawn after rinse water stops flowing from the water conditioner drain line.

Immediate Regeneration Timers

These timers do not have a 24 hour gear. Setting the gallons on the program wheel and manual regeneration procedure are the same as previous instructions. The timer will regenerate as soon as the capacity gallons reaches zero.

NOTE: The program wheel to the left may be different than the program wheel on the product.

NOTE: To set meter capacity rotate manual knob one - 360° revolution to set gallonage.

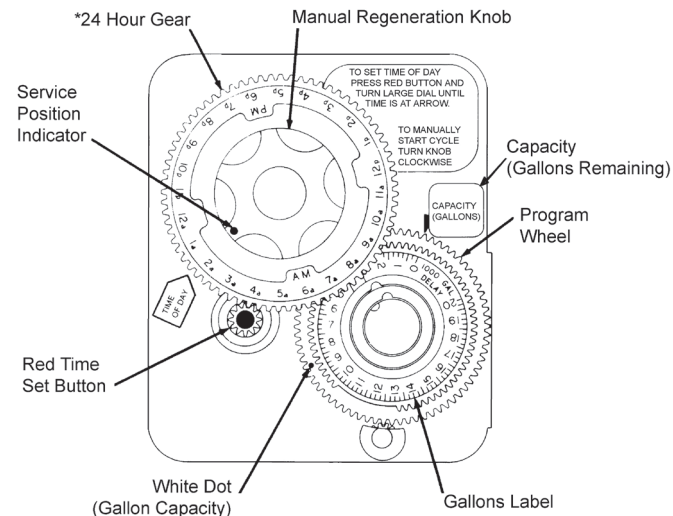

*Immediate regeneration timers do not have a 24-hour gear. No time of day can be set.

61502-3200 Rev A

Figure 3

3200, 3210, 3220, 3230 REGENERATION CYCLE SETTING PROCEDURE

How To Set The Regeneration Cycle Program

The regeneration cycle program on your water conditioner has been factory preset, however, portions of the cycle or program may be lengthened or shortened in time to suit local conditions.

3200 Series Timers (Figure 4)

1. To expose cycle program wheel, grasp timer in upper left-hand corner and pull, releasing snap retainer and swinging timer to the right.
2. To change the regeneration cycle program, the program wheel must be removed. Grasp program wheel and squeeze protruding lugs toward center, lift program wheel off timer. Switch arms may require movement to facilitate removal.
3. Return timer to closed position engaging snap retainer in back plate. Make certain all electrical wires locate above snap retainer post.

Timer Setting Procedure

How To Change The Length Of The Backwash Time

The program wheel as shown in the drawing is in the service position. As you look at the numbered side of the program wheel, the group of pins starting at zero determines the length of time your unit will backwash.

For example, if there are six pins in this section, the time of backwash will be 12 min. (2 min. per pin). To change the length of backwash time, add or remove pins as required. The number of pins times two equals the backwash time in minutes.

How To Change The Length Of Brine And Rinse Time

1. The group of holes between the last pin in the backwash section and the second group of pins determines the length of time that your unit will brine and rinse (2 min. per hole).
2. To change the length of brine and rinse time, move the rapid rinse group of pins to give more or fewer holes in the brine and rinse section. Number of holes times two equals brine and rinse time in minutes.

How To Change The Length Of Rapid Rinse

1. The second group of pins on the program wheel determines the length of time that your water conditioner will rapid rinse (2 min. per pin).
2. To change the length of rapid rinse time, add or remove pins at the higher numbered end of this section as required. The number of pins times two equals the rapid rinse time in minutes.

How To Change The Length Of Brine Tank Refill Time

1. The second group of holes in the program wheel determines the length of time that your water conditioner will refill the brine tank (2 min. per hole).
2. To change the length of refill time, move the two pins at the end of the second group of holes as required.
3. The regeneration cycle is complete when the outer microswitch is tripped by the two pin set at end of the brine tank refill section.
4. The program wheel, however, will continue to rotate until the inner micro switch drops into the notch on the program wheel.


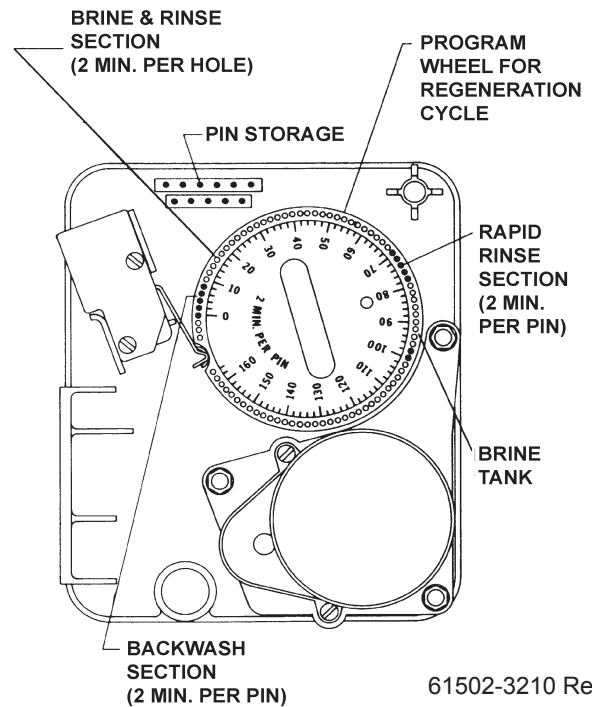


Figure 4

3200 TIME CLOCK TIMER ASSEMBLY

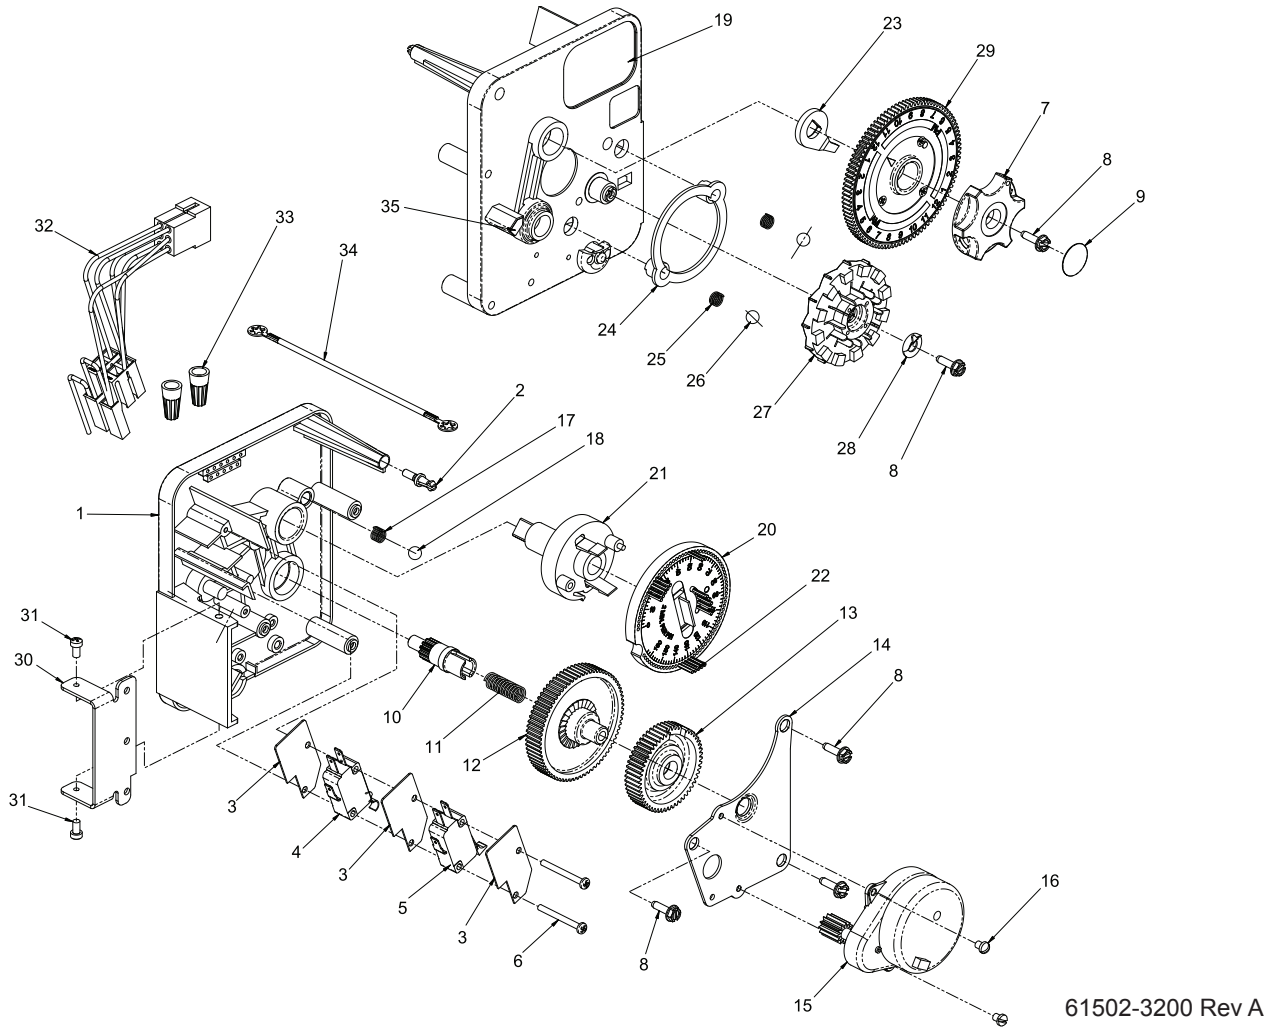


61502-3200 Rev A

Item No.	QTY	Part No.	Description
1.....	1	13870.....	Housing, Timer, 3200
2.....	1	14265.....	Clip, Spring
3.....	3	14087.....	Insulator
4.....	1	10896.....	Switch, Micro
5.....	1	15320.....	Switch, Micro, Timer
6.....	2	11413.....	Screw, Pan Hd Mach, 4-40 x 1-1/8
7.....	1	13886.....	Knob, 3200
8.....	5	13296.....	Screw, Hex Wsh, 6-20 x 1/2
9.....	1	11999.....	Label, Button
10.....	1	13018.....	Pinion, Idler
11.....	1	13312.....	Spring, Idler Shaft
12.....	1	13017.....	Gear, Idler
13.....	1	13164.....	Gear, Drive
14.....	1	13887.....	Plate, Motor Mounting
15.....	1	18743-1.....	Motor, 120V, 60Hz, 1/30 RPM
	1	18752-1.....	Motor, 100V, 50Hz, 1/30 RPM
	1	18824-1.....	Motor, 23V, 50Hz, 1/30 RPM
	1	18826-1.....	Motor, 24V, 50Hz, 1/30 RPM
	1	19659-1.....	Motor, 24V, 60Hz, 1/30 RPM
	1	19660-1.....	Motor, 230V, 60Hz, 1/30 RPM
16.....	2	13278.....	Screw, Slt'd Fillister Hd 6-32 x .156

Item No.	QTY	Part No.	Description
17.....	1	15424.....	Spring, Detent, Timer
18.....	1	15066.....	Ball, 1/4", Delrin
19.....	1	15465.....	Label, Caution
20.....	1	19210.....	Program Wheel Assy
21.....	1	13911.....	Gear, Main Drive, Timer
22.....	17	41754.....	Pin, Spring, 1/16 x 5/8 SS, Timer
23.....	1	13011.....	Arm, Cycle Actuator
24.....	1	13864.....	Ring, Skipper Wheel
25.....	2	13311.....	Spring, Detent, Timer
26.....	2	13300.....	Ball, 1/4", SS
27.....	1	14381.....	Skipper Wheel Assy, 12 Day
	1	14860.....	Skipper Wheel Assy, 7 Day
28.....	1	13014.....	Pointer, Regeneration
29.....	1	40096-24.....	Dial, 12 AM Regen Assy, Black
	1	40096-02.....	Dial, 2 AM Regen Assy, Black
30.....	1	13881.....	Bracket, Hinger Timer
31.....	2	11384.....	Screw, Phil, 6-32 x 1/4 Zinc
32.....	1	13902.....	Harness, 3200
33.....	2	40422.....	Nut, Wire, Tan
34.....	1	15354-01.....	Wire, Ground, 4"
35.....	1	14007.....	Label, Time of Day


3210 METER DELAYED TIMER ASSEMBLY

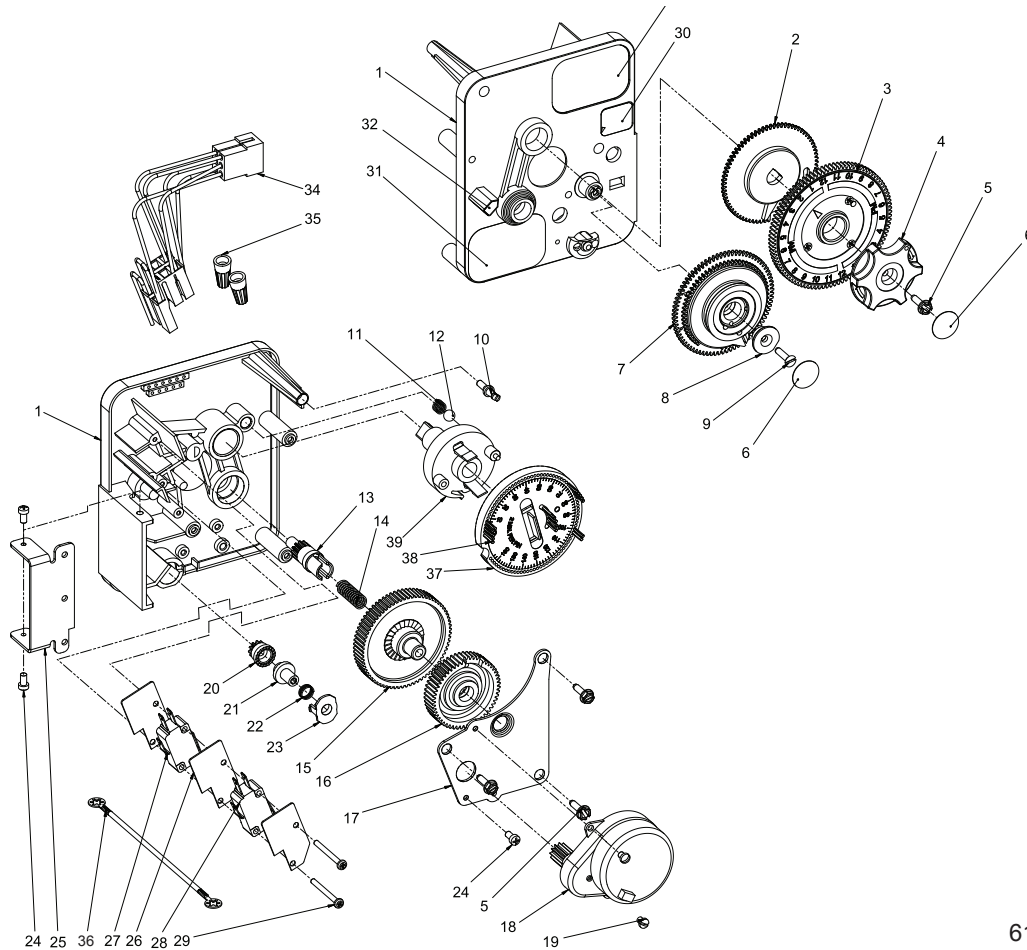

61502-3210 Rev A

Item No.	QTY	Part No.	Description	Item No.	QTY	Part No.	Description
1	1	13870	Housing, Timer, 3200	1	1	19660-1	Motor, 230V, 60Hz, 1/30 RPM
2	1	13802	Gear, Cycle Actuator	19	1	13278	Screw, Fillister Hd, 6-32 x .156
3	1	40096-02	Dial 2 AM Regen Assy, Black	20	1	13830	Pinion, Program Wheel Drive
4	1	13886	Knob, 3200	21	1	13831	Clutch, Drive Pinion
5	4	13296	Screw, Hex Wsh, 6-20 x 1/2	22	1	14276	Spring, Meter, Clutch
6	2	11999	Label, Button	23	1	14253	Retainer, Clutch Spring
7	1	60405-15	Program Wheel, w/34" Std Label, w/People Label Set @ 21	24	3	11384	Screw, Phil, 6-32 x 1/4
8	1	13806	Retainer, Program Wheel	25	1	13881	Bracket, Hinge Timer
9	1	13748	Screw, Flat Head St, 6-20 x 1/2	26	3	14087	Insulator
10	1	14265	Clip, Spring	27	1	10896	Switch, Micro
11	1	15424	Spring, Detent, Timer	28	1	15320	Switch, Micro, Timer
12	1	15066	Ball, 1/4" Delrin	29	2	11413	Screw, Pan Hd Mach, 4-40 x 1/8
13	1	13018	Pinion, Idler	30	1	14198	Label, Indicator
14	1	13312	Spring, Idler Shaft	31	1	15465	Label, Caution
15	1	13017	Gear, Idler	32	1	14007	Label, Time of Day
16	1	13164	Gear, Drive	33	1	14045	Label, Instruction
17	1	13887	Plate, Motor Mounting	34	1	13902	Harness, 3200
18	1	18743-1	Motor, 120V, 60Hz 1/30 RPM	35	2	40422	Nut, Wire, Tan
	1	18752-1	Motor, 100V, 50Hz, 1/30 RPM	36	1	15354-01	Wire, Ground, 4"
	1	18824-1	Motor, 23V, 50Hz, 1/30 RPM	37	1	19210	Program Wheel Assy
	1	18826-1	Motor, 24V, 50Hz, 1/30 RPM	38	17	41754	Pin, Spring, 1/16 x 5/8 SS, Timer
	1	19659-1	Motor, 24V, 60Hz, 1/30 RPM	39	1	13911	Gear, Main Drive, Timer


3220 METER IMMEDIATE TIMER ASSEMBLY

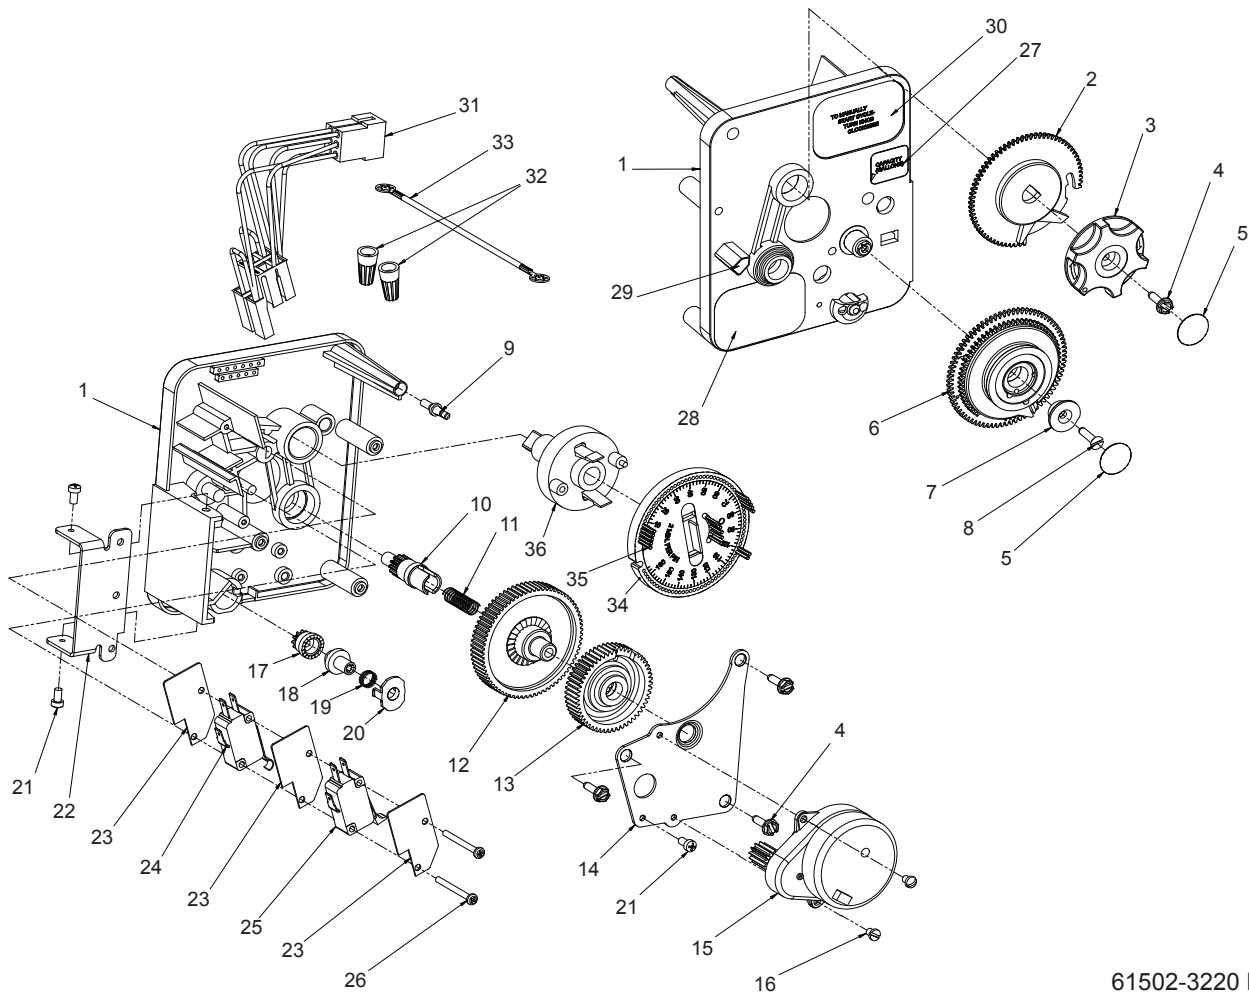

61502-3220 Rev B

Item No.	QTY	Part No.	Description	Item No.	QTY	Part No.	Description
1	1	13870	Housing, Timer	18	1	14501	Clutch, Drive Pinion
2	1	15431	Gear, Cycle Actuator, System #5	19	1	14276	Meter Clutch Spring
3	1	13886	Knob, 3200	20	1	14253	Retainer, Clutch Spring
4	4	13296	Screw, Hex Wsh, 6-20 x 1/2	21	3	11384	Screw, Phil, 6-32 x 1/4 Zinc
5	2	11999	Label, Button	22	1	13881	Bracket, Hinge Timer
6	1	60408-50	Program Wheel, W/2" Std Label	23	3	14087	Insulator
7	1	13806	Retainer, Program Wheel	24	1	15414-00	Micro Switch
8	1	13748	Screw, Fit Hd St, 6-20 x 1/2	25	1	15320	Switch, Micro, Timer
9	1	14265	Spring Clip	26	2	11413	Screw, Pan Hd Mach, 4-40 x 1-1/8
10	1	13018	Pinion, Idler	27	1	14198	Label, Indicator
11	1	18563	Idler Shaft Spring	28	1	15465	Label, Caution
12	1	13017	Gear, Idler	29	1	14007	Label, Time of Day
13	1	13164	Drive Gear	30	1	15148	Label, Instruction
14	1	13887	Plate, Motor Mounting	31	1	40617	Harness, 3220
15	1	18743-1	Motor, 120V, 60 Hz, 1/30 RPM	32	2	40422	Nut, Wire, Tan
	1	18752-1	Motor, 100V, 50Hz, 1/30 RPM	33	1	15354-01	Wire, Ground, 4"
	1	18824-1	Motor, 23V, 50Hz, 1/30 RPM	34	1	19210-05	Program Wheel Assembly, 9000/3230
	1	18826-1	Motor, 24V, 50Hz, 1/30 RPM	35	17	41754	Pin, Spring, 1/16 x 5/8 Stainless Steel, Timer
	1	19659-1	Motor, 24V, 60Hz, 1/30 RPM	36	1	15055	Gear, Main Drive
	1	19660-1	Motor, 230V, 60Hz, 1/30 RPM				
16	2	13278	Screw, Slt'd Fillister Hd				
17	1	14502	Pinion, Program Wheel				


POWERHEAD ASSEMBLY (ENVIRONMENTAL)

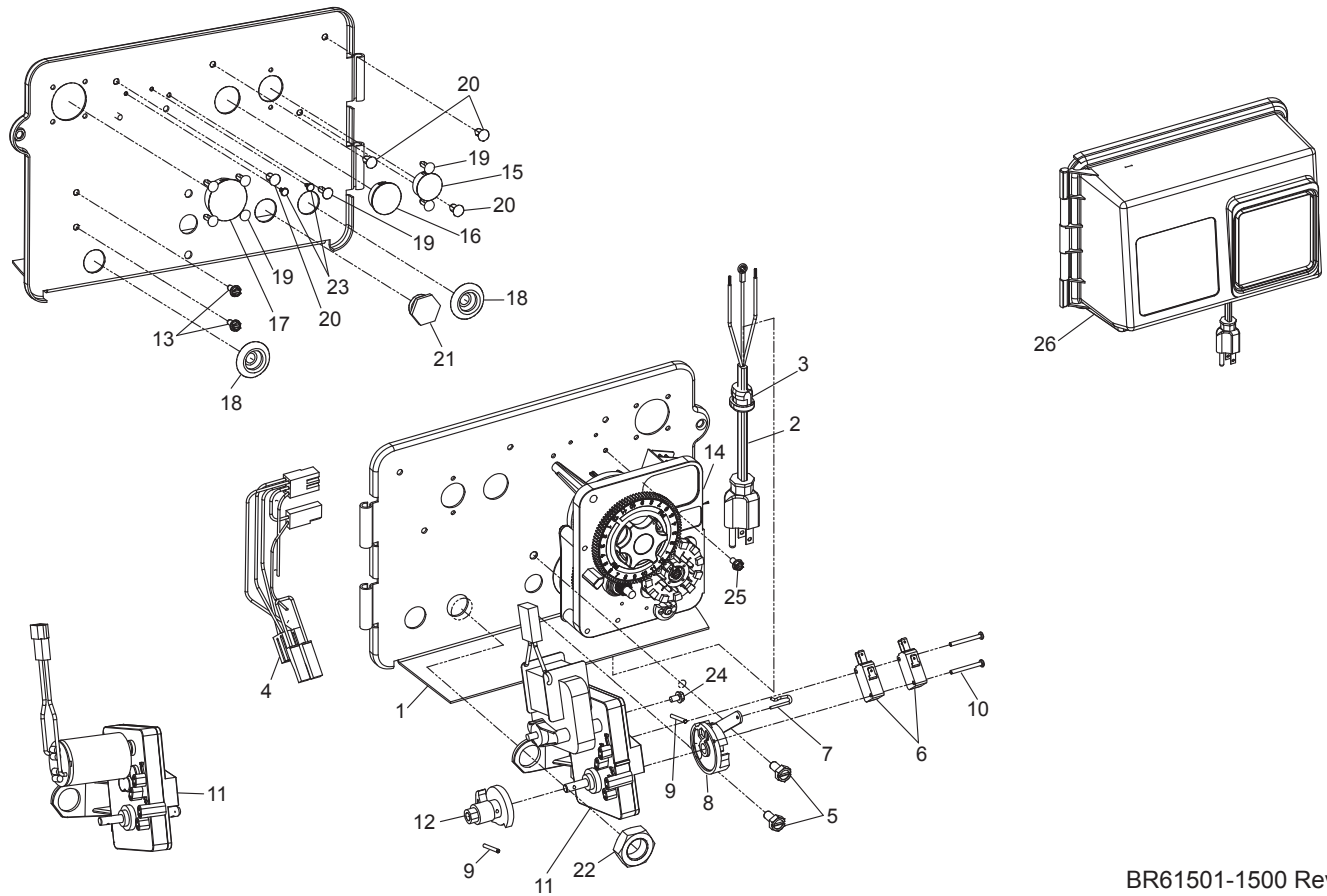

BR61501-1500 Rev C

Item No.	QTY	Part No.	Description	Item No.	QTY	Part No.	Description
1	1	18697-15	Backplate, Hinged	15	1	15806	Hole Plug, (HeyCo)
2	1	11838	Power Cord, 6', Fleck, Flat	16	1	16493	Plug, Hole, HeyCo, .88 Dia
3	1	13547	Strain Relief, Cord	17	1	17421	Plug, 1.20 Hole
4	1	40400	Harness, Drive Designr/Envirmtl	18	2	19691	Plug, .750 Dia. Hole, Flush
5	2	10231	Screw, Slot Hex 1/4-20 x 1/2 35 IN-LBS ±20%	19	7	19800	Plug (Hole Size: Dia .140)
6	2	10218	Switch, Micro	20	4	19801	Plug, Dia .190
7	1	10909	Pin, Connecting Rod Spring	21	1	10712	Fitting, Brine Valve (Used on Filter Valves)
8	1	60160-15	Drive Cam Assy, STF, Blue, 2900	22	1	10269	Nut, Jam, 3/4-16 (Used on Filter Valves) Wrench Tighten
9	2	10338	Pin, Roll, 3/32 x 7/8	23	2	41581	Plug, Hole .125 Dia, White
10	2	14923	Screw, Pan Hd MACH, 4-40 x 1 5.0 IN-LBS ±10%	24	1	10872	Screw, Hex WSH, 8-32 x 5/16 20 IN-LBS ±20%
11	1	41543	Motor, Drive, 115V/60 Hz	25	1	14202-01	Screw, Hex Washer #8-32 x 5/16 Hand Tighten
		42579	Motor, Drive, 24 VAC/DC, 50-60 Hz, Fam 1	26	1	60219-02	Cover Assy, Environmental, Black
		41545	Motor, Drive, 220V, 50-60Hz, SP, Fam 1				
12	1	12777	Cam, Shut-off Valve	Not Shown:			
13	2	10300	Screw, Hx Wash Head, 8 x 3/8 20 IN-LBS ±20%	1	15441	Cable Guide Assy, 2510	
14	1	3200	Timer Assy, 3200 7 or 12 Day	1	15495	Meter Cable, 13.87"	
			3210 Meter Delay				
			3220 Meter Immediate				

MANUAL POWERHEAD ASSEMBLY

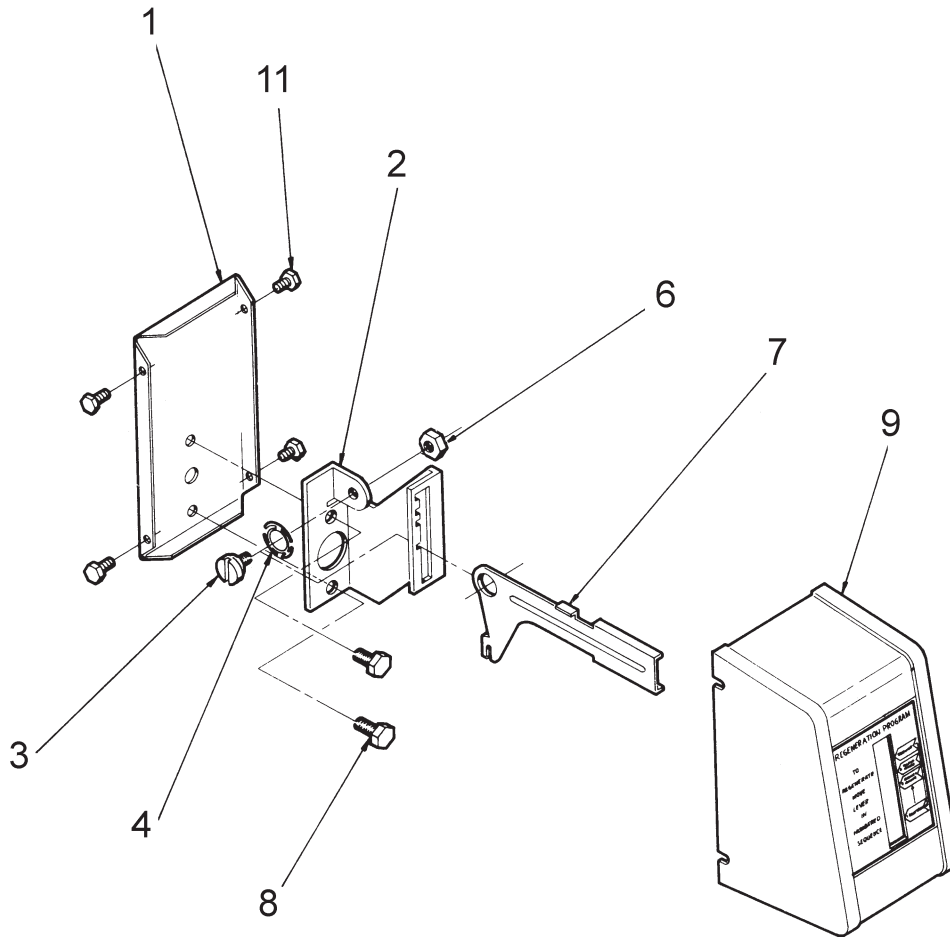


60409 Rev A

Item No.	QTY	Part No.	Description
1.....	1	12593.....	Backplate, Manual
2.....	1	12592.....	Bracket, Lever Position
3.....	1	12596.....	Screw, Spec Mach, 1/4 - 20 x 1/2
4.....	1	12707.....	Washer, Spring
6.....	1	11235.....	Nut, Hex, 1/4 - 20, Mach Screw, Zinc
7.....	1	12594.....	Lever, Valve Position
8.....	2	10231.....	Screw, Slot Hex, 1/4 - 20 x 1/2 18-8 SS
9.....	1	60224-32.....	Cover Assy, Manual, Filter
	1	60224-33.....	Cover Assy, Manual, Softener
11.....	4	10300.....	Screw, Slot Hex Wsh, 8-18 x 3/8 Type "B" RC44-47

Not Shown:

1	10909.....	Pin, Link
---------	------------	-----------

CONTROL VALVE ASSEMBLY

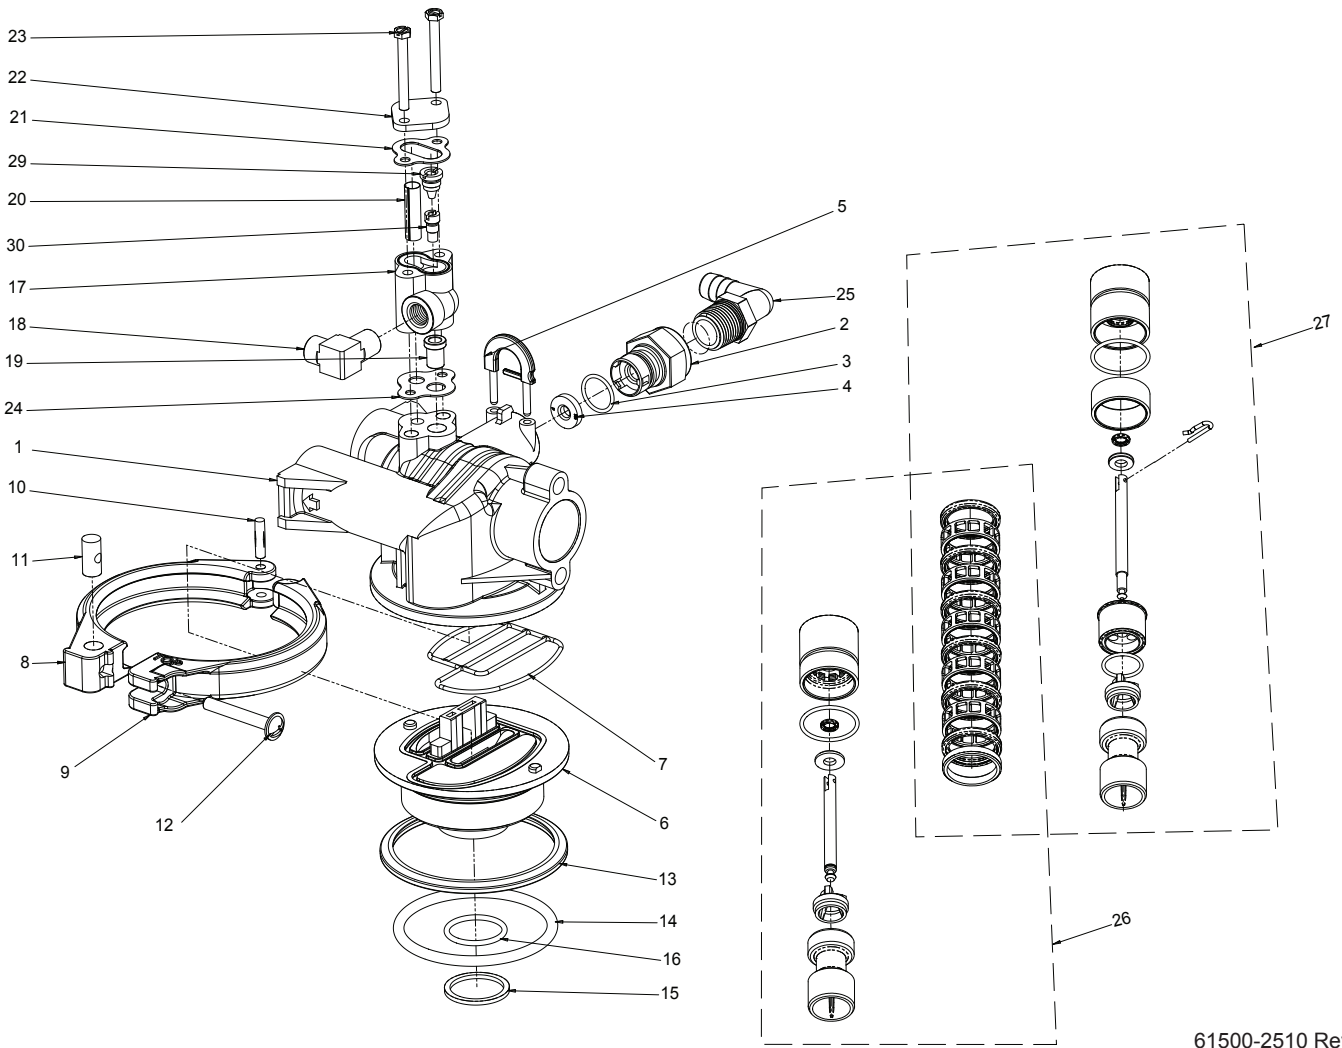


61500-2510 Rev B

Item No.	QTY	Part No.	Description
1.....	1	19328.....	Valve Body, 2510
2.....	1	11385-01.....	Housing, Flow Control, Plastic
3.....	1	11183.....	O-ring, -017
4.....	1	12408.....	Washer, Flow, 7.0 GPM
5.....	1	18312.....	Retainer, Drain
6.....	1	19322.....	Adapter Base, 2510
7.....	1	19936.....	Seal, 2510, Base
8.....	1	19899.....	Clamp, Female, 2510
9.....	1	19900.....	Clamp, Male, 2510
10.....	1	40000.....	Pin, Hinge, Clamp
11.....	1	19998.....	Pivot, Clamp, 2510
12.....	1	40057.....	Screw, Comb Hd, 114-20, 2"
13.....	1	19197.....	Ring, Slip
14.....	1	18303.....	O-ring, -336
15.....	1	13030.....	Retainer, Dist Tube, O-ring
16.....	1	13304.....	O-ring, -121
17.....	1	17776.....	Body, Injector, 1600
18.....	1	10328.....	Fitting, Elbow, 90 Deg.


Item No.	QTY	Part No.	Description
19.....	1	16221.....	Dispenser, Air
20.....	1	10227.....	Screen, Injector
21.....	1	10229.....	Gasket, Injector Cap, 1600
22.....	1	11893.....	Cap, Injector, SS
23.....	2	10692.....	Screw, Slot Hex Hd, 10-24x
24.....	1	14805.....	Gasket, Injector Body, 1600/1700
25.....	1	12338.....	Fitting, Elbow, 90 Deg.
26.....	1	61670-00.....	Piston Assy w/Seal & Spacer Kit 2510 Piston
27.....	1	61670-01.....	Piston Assy w/Seal & Spacer Kit 2510 Piston NHWBP
28.....	1	10757.....	Spacer, End
29.....	1	12973-3.....	Nozzle, Injector, #3, PVC
30.....	1	12974-3.....	Throat, Injector, #3, PVC

NOTE: For optimal seal life, the use of lubricants is not recommended.

SOFTENER FILTER CONVERSION KITS

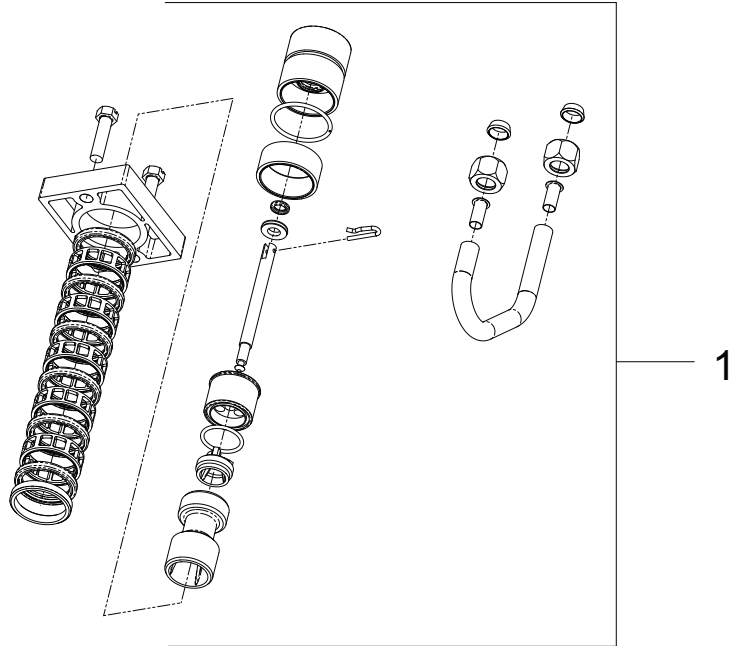

1

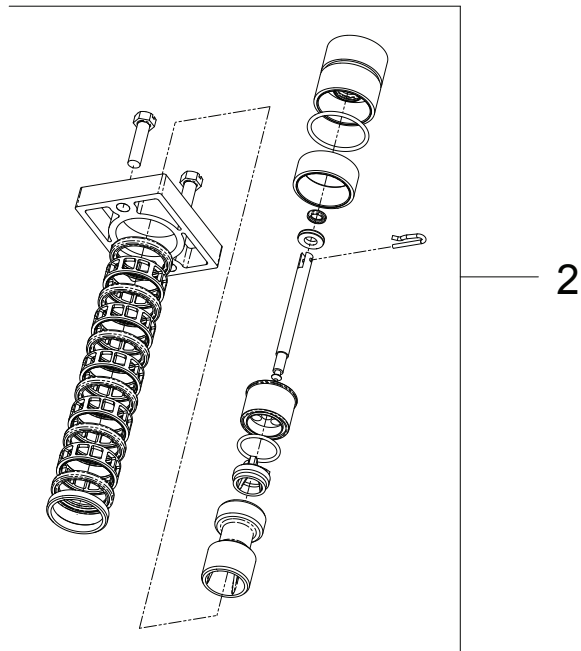


2

61671 Rev E

Item No.	QTY	Part No.	Description
1.....		61671-01.....	Piston Conversion w/Seal & Spacer 2510 NHWBP 1600
2.....		61671-00.....	Piston Kit w/Seal & Spacer 2510 NHWBP Filter

NOTE: For optimal seal life, the use of lubricants is not recommended.



METER ASSEMBLY

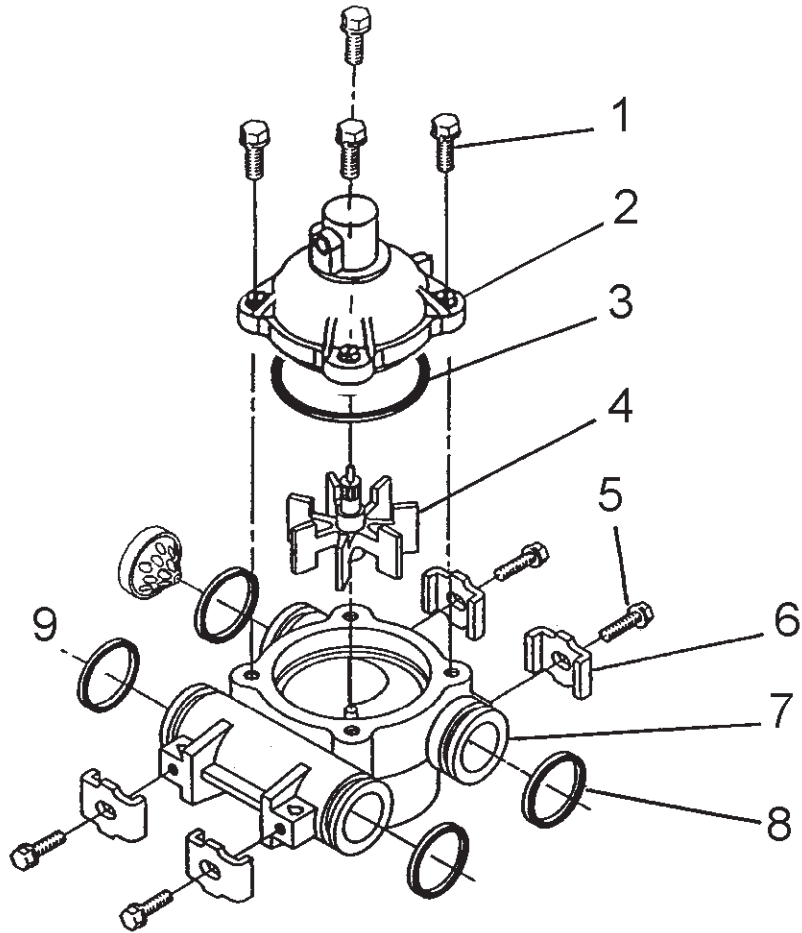

60088 Rev E

Item No.	QTY	Part No.	Description
1.....	4	12473.....	Screw - Meter Cover Assembly
2.....	1	15659.....	Meter Cover Assy. - Ext., Rt. Angle (Not Shown)
.....	1	15452.....	Meter Cap Assy, 3/4" to 2", Std, Rt Ang/90, Plastic Paddle
3.....	1	13847.....	O-ring - Meter Cover Assembly
4.....	1	13509.....	Impeller
5.....	4	13314.....	Screw - Adapter Clip
6.....	4	13255.....	Adapter Clip
7.....	1	13821.....	Meter Body
8.....	4	13305.....	O-ring - Meter Body
9.....	1	14613.....	Flow Straightener

1600 BRINE SYSTEM ASSEMBLY

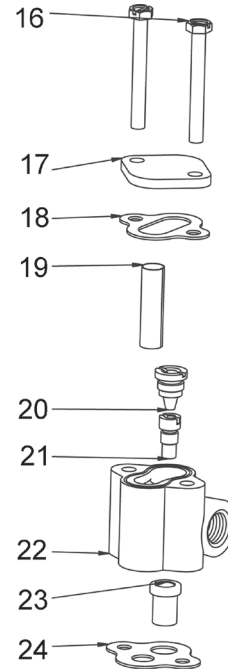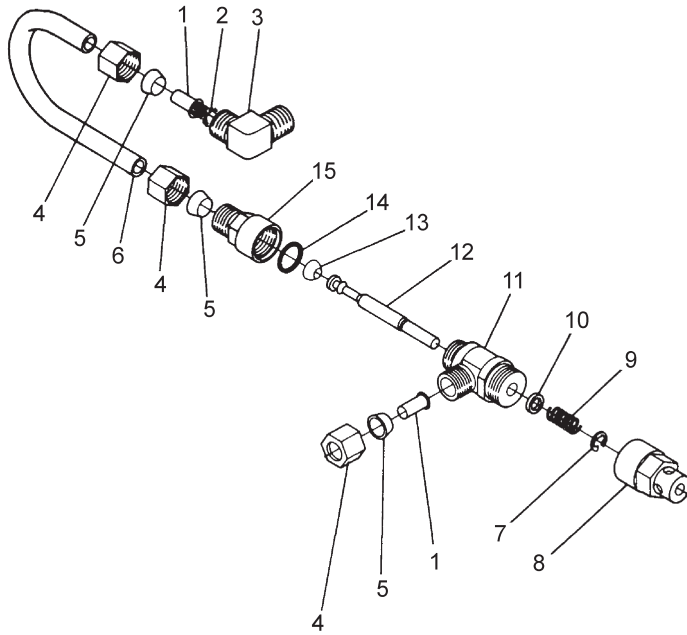


60029 Rev C

Item No.	QTY	Part No.	Description
1.....2	10332	Fitting, Insert, 3/8	
2.....1	12767	Screen, Brine	
3.....1	10328	Fitting, Elbow, 90 Deg. 1/4 PT x 3/8 Tube	
4.....3	10329	Fitting, Tube, 3/8 Nut, Brass	
5.....3	10330	Fitting, Sleeve, 3/8 Celcon	
6.....1	16508	Tube, Brine, 1600, PVC	
1.....1	16508-01	Tube, Brine Valve, 2850/2900s	
1.....1	12774	Tube, Brine Valve, 1500	
1.....1	40027	Tube, Brine Valve, 2510	
1.....1	15221	Tube, Brine Valve, 2750/2900	
1.....1	42184	Tube, Brine Valve, 2850s	
1.....1	41683*	Tube, Brine Valve, UF, 1600/1650	
7.....1	10250	Ring, Retaining	
8.....1	11749	Guide, Brine Valve Stem	
9.....1	10249	Spring, Brine Valve	
10.....1	12550	Quad Ring, -009	
11.....1	12748	Brine Valve Body Assy, 1600 w/ Quad Ring	

Item No.	QTY	Part No.	Description
12.....1	12552-02	Brine Valve Stem, 1600, with seat	
13.....1	12626	Seat, Brine Valve	
14.....1	11982	O-ring, -016	
15.....1	60020-25	BLFC, .25 GPM, 1600	
1.....1	60020-50	BLFC, .50 GPM, 1600	
1.....1	60020-100	BLFC, 1.0 GPM, 1600	
16.....2	10692	Screw, Slot Hex Hd, 10 - 24X 18-8 Stainless Steel	
17.....1	11893	Cap, Injector, SS	
18.....1	10229	Gasket, Injector Cap, 1600	
19.....1	10227	Screen, Injector	
20.....1	10913-xx	Nozzle, Injector, -xx is for injector size	
21.....1	10914-xx	Throat, Injector, -xx is for injector size	
22.....1	17776	Body, Injector, 1600	
1.....1	17776-02*	Body, Injector, 1600 Upflow	
23.....1	16221	Dispenser, Air	
24.....1	14805	Gasket, Injector Body, 1600/1700	

*Upflow Only

1650 BRINE SYSTEM

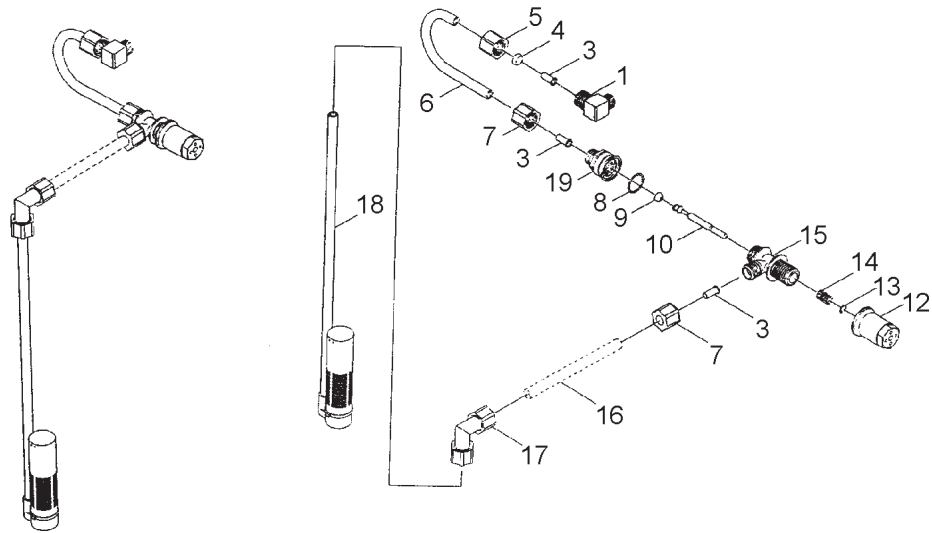

60011 Rev D

Item No.	QTY	Part No.	Description
1.....	1	10328	Elbow, 90 1/4 NPT x 3/8
3.....	3	10332	Insert, 3/8
4.....	1	10330	Sleeve, 3/8 Nut Brine
5.....	1	10329	Tube Fitting, 3/8 Nut Brine
6.....	1	40027	Tube, Brine Valve
7.....	2	19625	Assy., GFN Nut
8.....	1	16924	O-ring
9.....	1	12626	Seat, Brine Valve
10.....	1	12552	Brine Valve Stem, 1600
12.....	1	17906	Guide, Brine Valve Stem
13.....	1	10250	Retaining Ring
14.....	1	10249	Spring, Brine Valve
15.....	1	17884	Brine Valve Body Assy., Plastic
17.....	1	12794	Elbow, 3/8 Tube Poly, White
18.....	1	60002	#500 Air Check
19.....	1	60010-xx	BLFC Assy.

60010-25 BLFC Assy. (Parts)

1	17907	Housing
1	12128	.25 GPM Label
1	12094	.25 Flow Washer
1	12098	Retainer


60010-50 BLFC Assy. (Parts)

1	17907	Housing
1	10759	.50 GPM Label
1	12095	.50 Flow Washer
1	12098	Retainer

60010-100 BLFC Assy. (Parts)

1	17907	Housing
1	10760	1.0 GPM Label
1	12097	1.0 Flow Washer
1	12098	Retainer


BYPASS VALVE ASSEMBLY (PLASTIC)

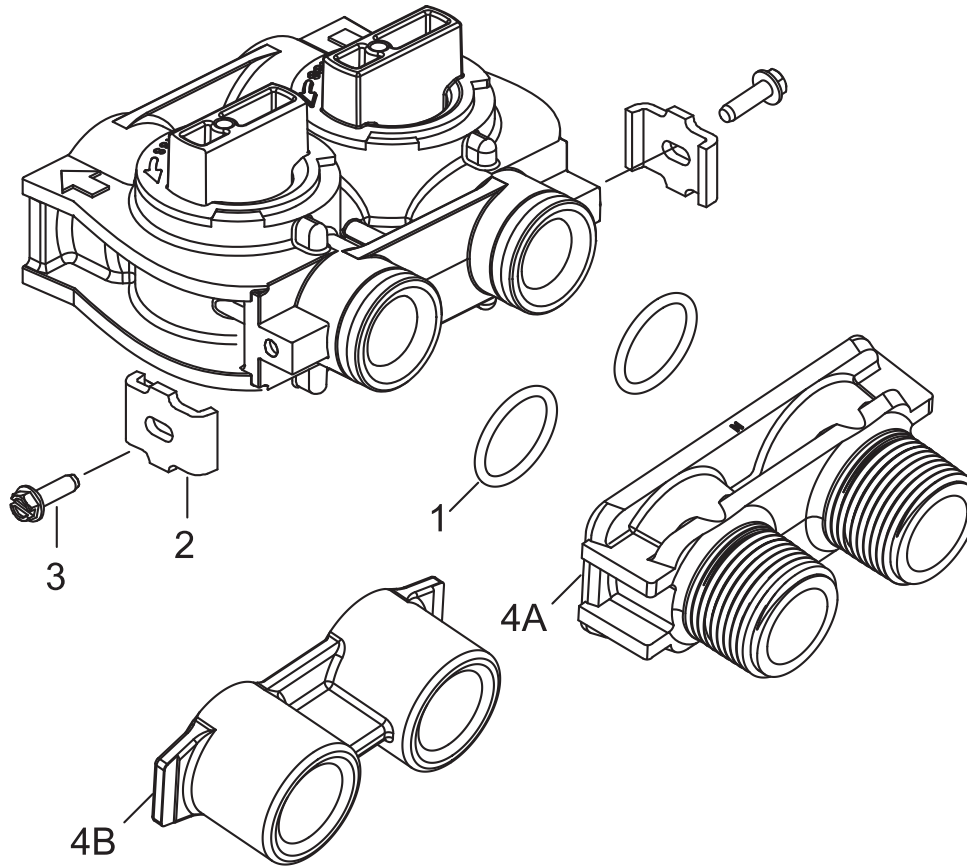

60049 Rev G


Item No.	QTY	Part No.	Description
1.....22	13305.....	O-ring, -119
2.....22	13255.....	Clip, Mounting
3.....22	13314.....	Screw, Slot Ind Hex, 8-18 x .60
4A.....11	18706.....	Yoke, 1", NPT, Plastic
	18706-02.....	Yoke, 3/4", NPT, Plastic
4B.....11	13708-40.....	Yoke, 1", Sweat
	13708-45.....	Yoke, 3/4", Sweat
	19275.....	Yoke, Angle 90 Deg, 3/4", NPT
	19275-45.....	Yoke, Angle 90 Deg, 3/4" Sweat
	19620-01.....	Yoke Assy, 3/4", R/Angle, 90 Deg w/O-rings, Clips & Screws
	40636.....	Yoke, 1 1/4", NPT
	40636-49.....	Yoke, 1 1/4", Sweat
	41027-01.....	Yoke, 3/4", NPT, Cast, Machined
	41026-01.....	Yoke, 1", NPT, Cast, Machined, SS

BYPASS VALVE ASSEMBLY (METAL)

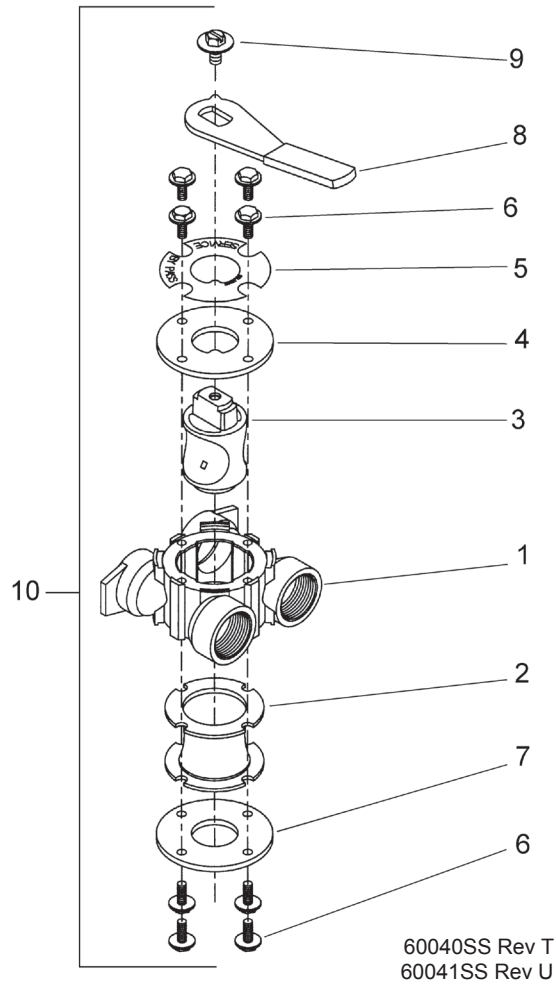

Item No.	QTY	Part No.	Description
1.....	1	40614.....	Bypass Body, 3/4"
		40634.....	Bypass Body, 1", SS
2.....	1	14105.....	Seal, Bypass, 560CD
3.....	1	11972.....	Plug, Bypass
4.....	1	11978.....	Side Cover
5.....	1	13604-01.....	Label
6.....	8	15727.....	Screw
7.....	1	11986.....	Side Cover
8.....	1	11979.....	Lever, Bypass
9.....	1	11989.....	Screw, Hex Head, 1/4-14
10.....	1	60040SS.....	Bypass Valve, 5600, 3/4" NPT Blk Grip Lever, SS
		60041SS.....	Bypass Valve, 5600, 1" NPT Blk Grip Lever, SS


2300 SAFETY BRINE VALVE

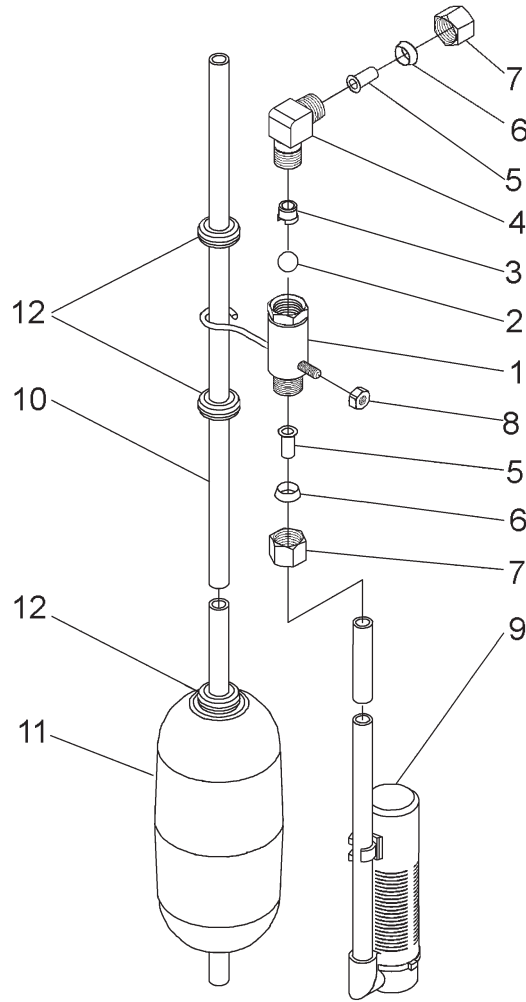

60027 Rev D

Item No.	QTY	Part No.	Description
1	1	60027-00	Safety Brine Valve, 2300, Less Elbow
2	1	10138	Ball, 3/8", Brass
3	1	11566	Ball Stop, Slow Fill
4	1	10328	Fitting, Elbow, 90 Deg. 1/4 NPT x 3/8 Tube
5	1	10332	Fitting, Insert, 3/8
6	1	10330	Fitting, Sleeve, 3/8 Celcon
7	1	10329	Fitting, Tube, 3/8 Nut, Brass
8	1	10186	Nut, Hex, 10-32
9	1	60002-34	Air Check, #500, 34" Long
		60003-34	Air Check, #500, HW, 34" Tube
10	1	10149	Rod, Float
11	1	10700	Float Assy, White
12	3	10150	Grommet, .30 Dia

2310 SAFETY BRINE VALVE

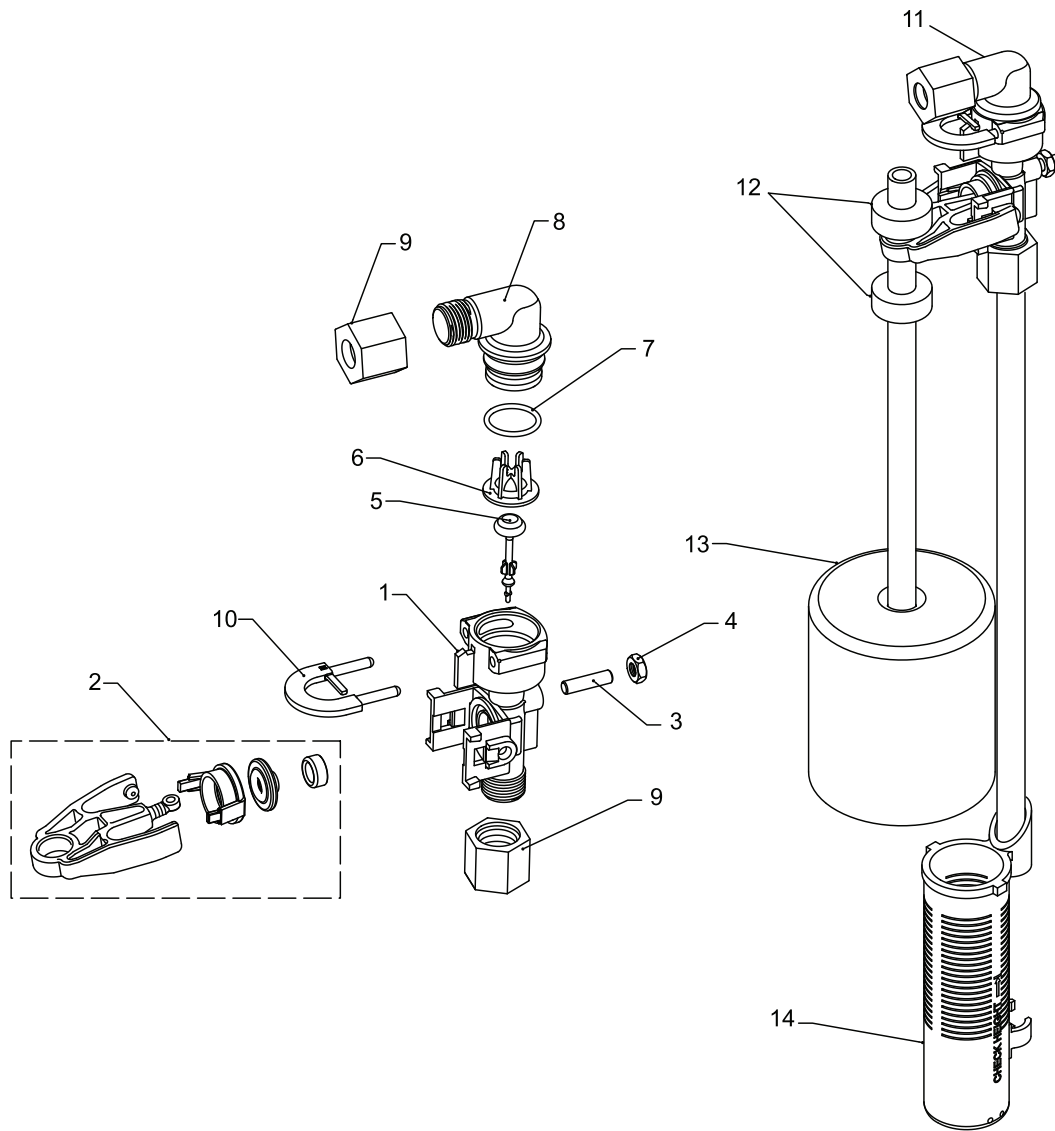

42112_REVA

Item No.	QTY	Part No.	Description
1.....	1	19645.....	Body, Safety Brine Valve, 2310
2.....	1	19803.....	Safety Brine Valve Assy
3.....	1	19804.....	Screw, Sckt Hd, Set, 10-24 x .75
4.....	1	19805.....	Nut, Hex, 10-24, Nylon Black
5.....	1	19652-01.....	Poppet Assy, SBV w/O-ring
6.....	1	19649.....	Flow Dispenser
7.....	1	11183.....	O-ring, -.017
8.....	1	19647.....	Elbow, Safety Brine Valve
9.....	2	19625.....	Nut Assy, 3/8" Plastic
10.....	1	18312.....	Retainer, Drain
11.....	1	60014.....	Safety Brine Valve Assy, 2310
12.....	2	10150.....	Grommet, .30 Dia
13.....	1	60068-30.....	Float Assy, 2310, w/30" Rod
14.....	1	60002-34.....	Air Check, #500, 34" Long

SEAL & SPACER TOOLS & REPLACEMENT

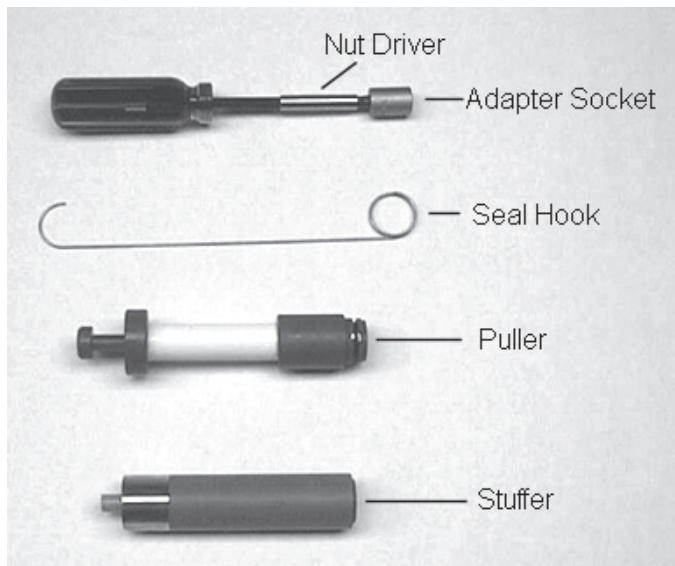


Figure 5

Tools Used in the Seal and Spacer Replacement

Description	Part No.
Nut Driver	12664
Socket Adapter	16906
Socket 7/16"	12665
Seal Hook	12874
Puller	13061
Stuffer	11098

NOTE: Photos shown are for reference only for replacing the seal and spacer. Actual valve may be different.

1. Turn off water supply to valve. Next, cycle valve to backwash position, then to service. Now remove electrical plug from outlet.
2. Remove control box cover.
3. Disconnect the brine line from the injector housing to the brine valve (if your unit has timed brine tank fill).
4. Remove the two capscrews that hold the back plate to the valve.
5. Grasp the back plate on both sides and slowly pull end plug and piston assembly out of the valve body (see Figure 6) and lay aside.

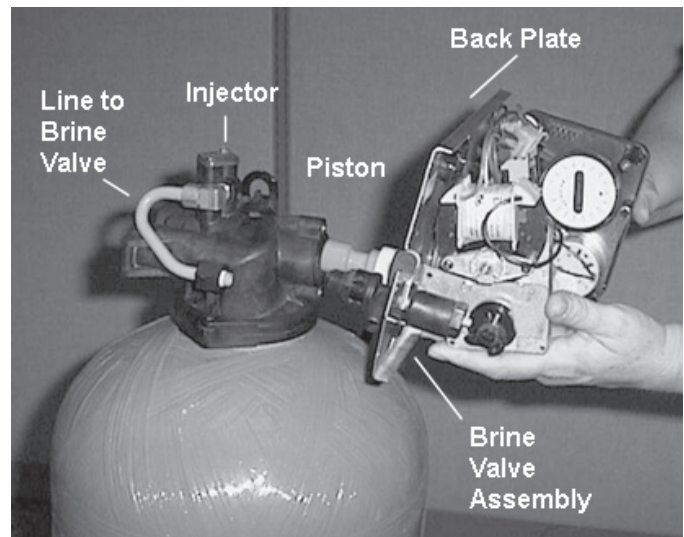


Figure 6

6. Remove the seal first using the wire hook with the finger loop (see Figure 7).

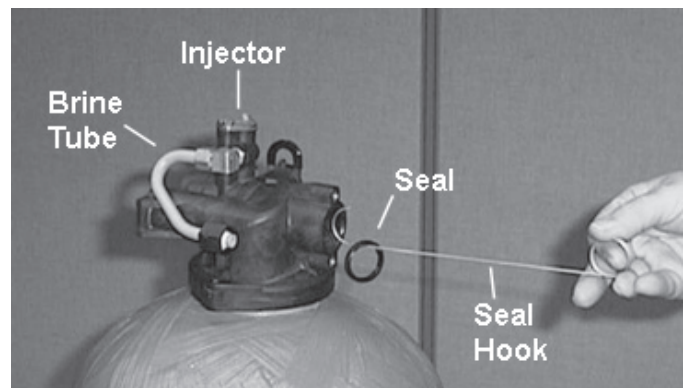


Figure 7

7. The spacer tool (use only for removing the spacers) has three retractable pins, retained by a rubber ring, at one end. They are retracted or pushed out by pulling or pushing the center button the opposite end.
8. Insert the pin end of the spacer tool into the valve body with the pins retracted (button pulled back). Push the tool tight against the spacer and push the button in, (see ?). When the button is pushed in, the pins are pushed out to engage the 1/4 dia. holes in the spacer. Remove the tool from the valve body. The spacer will be on the end. Pull the center button back, the pins will be retracted and the spacer can be removed from the spacer tool.

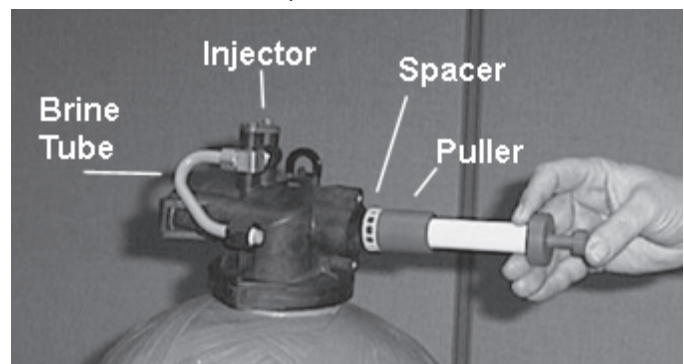


Figure 8

SEAL & SPACER TOOLS & REPLACEMENT *continued*

9. Alternately remove the remaining seals and spacers in accordance with steps No. 6 and 8.
10. The last or end spacer does not have any holes for the pins of the spacer tool to engage, therefore if the end spacer does not come out on the first try, try again using the wire hook with the finger loop.
11. To replace seals, spacers and end ring, use special tool with the brass sleeve on one end. This is a double-purpose tool (see ?). The male end acts as a pilot to hold the spacers as they are pushed into the valve body and the brass female end is used to insert the seals into the valve body.

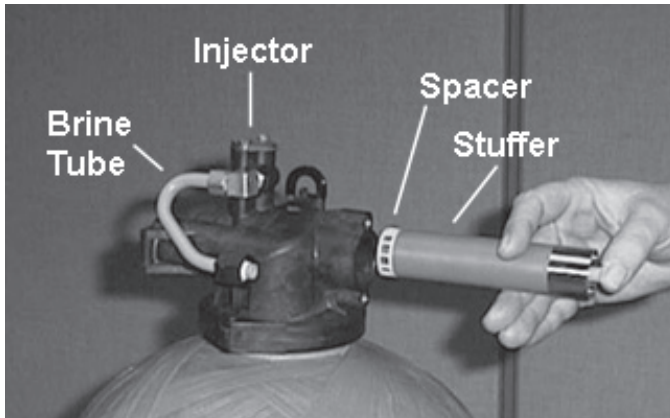


Figure 9

12. To restuff a valve body, first take the end ring (the plastic or brass ring without holes), then with your thumb press the button on the brass sleeve end. The large dia. inner portion is now exposed (see Figure 8). Place the end ring on this pilot with the lip on the end ring facing the tool. Push the tool into the valve body bore until it bottoms. While the tool is in the valve body, take a seal and press it into the inside diameter of the exposed brass female end.
13. Remove the tool, turn it end for end and insert it into the valve body bore. While holding the large dia. of the tool, slide it all the way into the valve body bore until it bottoms. Then push the center button to push the seal of the tool and leave it in place in the valve body.
14. Remove the tool from the valve body and push the center on the brass female end to expose the pilot on the opposite end. Place a spacer on this end and insert the spacer and tool into the valve.

GENERAL SERVICE HINTS FOR METER CONTROL

Problem: Softener delivers hard water

Reason: Reserve capacity has been exceeded.

Correction: Check salt dosage requirements and reset program wheel to provide additional reserve.

Reason: Program wheel is not rotating with meter output.

Correction: Pull cable out of meter cover and rotate manually. Program wheel must move without binding and clutch must give positive clicks when program wheel strikes regeneration stop. If it does not, replace timer.






Reason: Meter is not measuring flow.

Correction: Check meter with meter checker.

TROUBLESHOOTING


Problem	Cause	Correction
Water conditioner fails to regenerate.	Electrical service to unit has been interrupted	Assure permanent electrical service (check fuse, plug, pull chain, or switch)
	Timer is defective.	Replace timer.
	Power failure.	Reset time of day.
Hard water.	By-pass valve is open.	Close by-pass valve.
	No salt is in brine tank.	Add salt to brine tank and maintain salt level above water level.
	Injector screen plugged.	Clean injector screen.
	Insufficient water flowing into brine tank.	Check brine tank fill time and clean brine line flow control if plugged.
	Hot water tank hardness.	Repeated flushings of the hot water tank is required.
	Leak at distributor tube.	Make sure distributor tube is not cracked. Check O-ring and tube pilot.
	Internal valve leak.	Replace seals and spacers and/or piston.
Unit used too much salt.	Improper salt setting.	Check salt usage and salt setting.
	Excessive water in brine tank.	See "Excessive water in brine tank".
Loss of water pressure.	Iron buildup in line to water conditioner.	Clean line to water conditioner.
	Iron buildup in water conditioner.	Clean control and add mineral cleaner to mineral bed. Increase frequency of regeneration.
	Inlet of control plugged due to foreign material broken loose from pipes by recent work done on plumbing system.	Remove piston and clean control.
Loss of mineral through drain line.	Air in water system.	Assure that well system has proper air eliminator control. Check for dry well condition.
	Improperly sized drain line flow control.	Check for proper drain rate.
Iron in conditioned water.	Fouled mineral bed.	Check backwash, brine draw, and brine tank fill. Increase frequency of regeneration. Increase backwash time.
Excessive water in brine tank.	Plugged drain line flow control.	Clean flow control.
	Plugged injector system.	Clean injector and screen.
	Timer not cycling.	Replace timer.
	Foreign material in brine valve.	Replace brine valve seat and clean valve.
	Foreign material in brine line flow control.	Clean brine line flow control.
Softener fails to draw brine.	Drain line flow control is plugged.	Clean drain line flow control.
	Injector is plugged.	Clean injector
	Injector screen plugged.	Clean screen.
	Line pressure is too low.	Increase line pressure to 20 psi
	Internal control leak	Change seals, spacers, and piston assembly.
	Service adapter did not cycle.	Check drive motor and switches.
Control cycles continuously.	Misadjusted, broken, or shorted switch.	Determine if switch or timer is faulty and replace it, or replace complete power head.
Drain flows continuously.	Valve is not programming correctly.	Check timer program and positioning of control. Replace power head assembly if not positioning properly.
	Foreign material in control.	Remove power head assembly and inspect bore. Remove foreign material and check control in various regeneration positions.
	Internal control leak.	Replace seals and piston assembly.

FLOW DATA & INJECTOR DRAW RATES

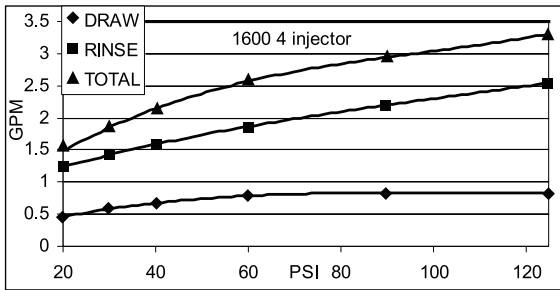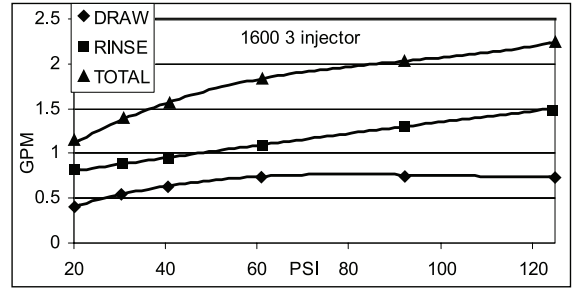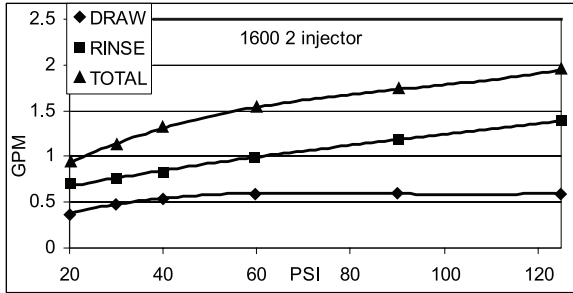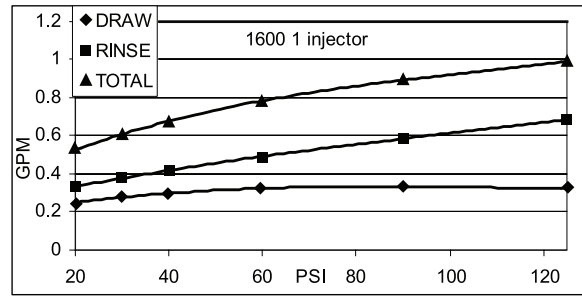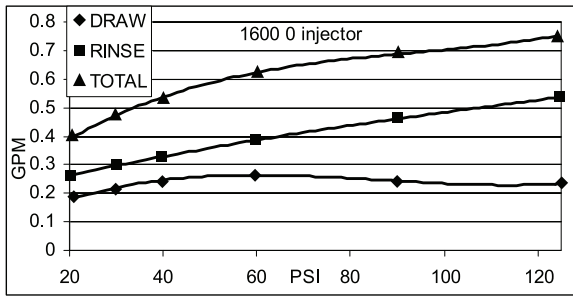

TR20391_REVA

WIRING

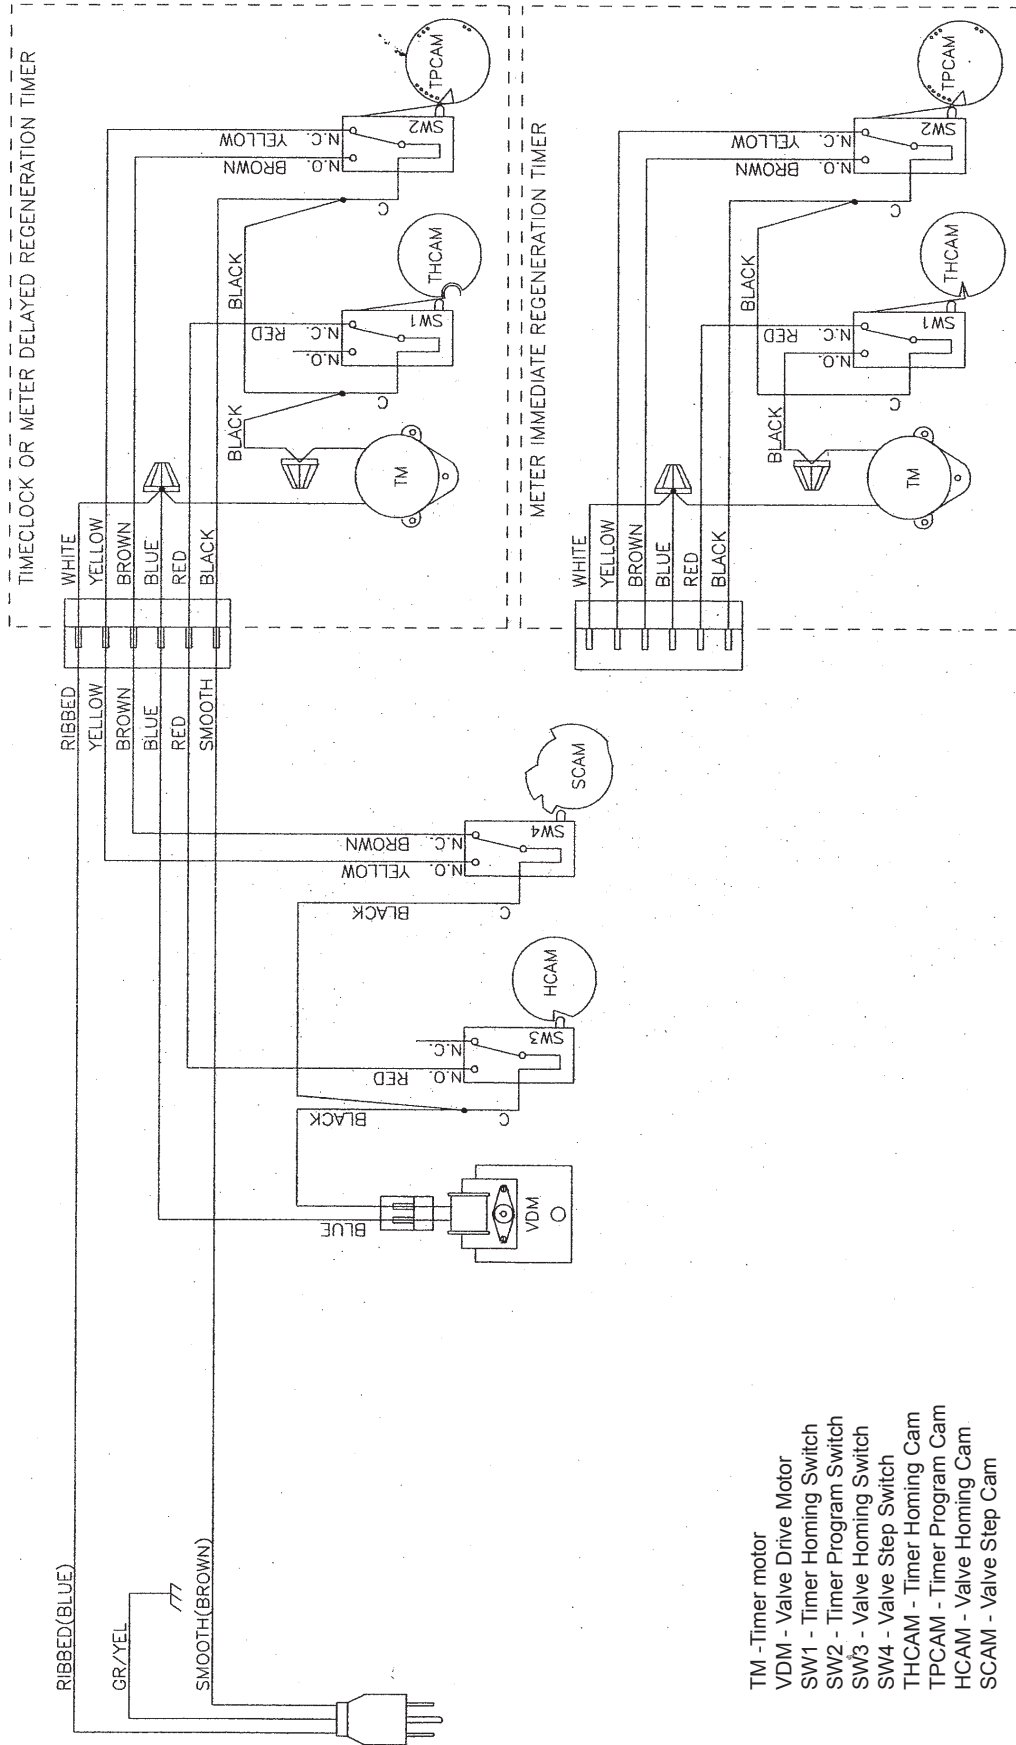

- TM - Timer motor
- VDM - Valve Drive Motor
- SW1 - Timer Homing Switch
- SW2 - Timer Program Switch
- SW3 - Valve Homing Switch
- SW4 - Valve Step Switch
- THCAM - Timer Homing Cam
- TPCAM - Timer Program Cam
- HCAM - Valve Homing Cam
- SCAM - Valve Step Cam

NOTE:

1. Single Tank Timeclock, Meter Delayed, or Meter Immediate Regeneration
2. Valve Shown In Service Position.

SERVICE ASSEMBLIES

24 Hour Gear Assemblies

40096-02	Dial 2AM Regen Assy, Black
40096-24	Dial 12AM Regen Assy, Black
60519-02	Gear Assy, 3200 24 Hour 2 Times/Day
60519-03	Gear Assy, 3200, 24 Hour 3 Times/Day
60519-04	Gear Assy, 3200, 24 Hour 4 Times/Day
60519-06	Gear Assy, 3200, 24 Hour (12:00) 6 Times/Day

Brine Line Flow Control (BLFC)

60010-25	BLFC, 1650, .25 GPM, Plastic
60010-50	BLFC, 1650, .50 GPM, Plastic
60010-100	BLFC, 1650, 1.0 GPM, Plastic

Brine Valves

60011-010	Brine Valve, 1650, Short Stem, .25 GPM, Less Tube
60011-030	Brine Valve, 1650, Short Stem, 1.0 GPM, Less Tube

Bypasses

60049	Bypass Plastic Assy
60040SS	Bypass Valve, 5600, 3/4" NPT
60041SS	Bypass Valve, 5600, 1" NPT

Cam

60160-15	Drive Cam Assy, STF, Blue
----------	---------------------------

Clamp

60503	Clamp Ring Assembly, 2510
-------	---------------------------

Coupling

60510	Adapter Coupling Assy, 5600
-------	-----------------------------

Drain Line Flow Controls

60705-00	DLFC, Plastic, Blank
60705-06	DLFC, Plastic, .60 GPM
60705-08	DLFC, Plastic, .80 GPM
60705-10	DLFC, Plastic, 1.0 GPM
60705-12	DLFC, Plastic, 1.2 GPM
60705-13	DLFC, Plastic, 1.3 GPM
60705-15	DLFC, Plastic, 1.5 GPM
60705-17	DLFC, Plastic, 1.7 GPM
60705-20	DLFC, Plastic, 2.0 GPM
60705-24	DLFC, Plastic, 2.4 GPM
60705-30	DLFC, Plastic, 3.0 GPM
60705-35	DLFC, Plastic, 3.5 GPM
60705-40	DLFC, Plastic, 4.0 GPM
60705-45	DLFC, Plastic, 4.5 GPM
60705-50	DLFC, Plastic, 5.0 GPM
60705-60	DLFC, Plastic, 6.0 GPM
60705-70	DLFC, Plastic, 7.0 GPM
60705-8.0	DLFC, QC x 3/4" F, 8.0 GPM
60705-9.0	DLFC, QC x 3/4" F, 9.0 GPM
60705-12	DLFC, QC x 3/4" F, 12.0 GPM
60705-15	DLFC, QC x 3/4" F, 15.0 GPM

Drives

60050-21	Drive Assy, 2750, STF, 120V Softener
----------	--------------------------------------

Injectors

60480-xx	1600 Injector Assy (Specify size of Injector)
----------	--

Meters

60088-180	Meter Assy, 3/4" Dual Port, Slip Std, Rt Ang/180 Plastic Paddle w/clps
60089-180	Meter Assy, 3/4" Dual Port, Slip Ext, Rt Ang/180 Plastic Paddle w/clps

Pistons

61670-00	Piston Assy w/ Seal & Spacer Kit 2510 Piston
61670-01	Piston Assy w/Seal & Spacer Kit 2510 Piston NHWBP
61671-00	Piston Conversion w/Seal & Spacer 2510 NHWBP Filter
61671-01	Piston Conversion w/Seal & SPacer 2510 NHWBP 1600

Program Wheels

60405-10	Program Wheel, w/3/4" Std Label Set @ 21
60405-15	Program Wheel, w/3/4" Std Label w/ People Label Set @ 21

Safety Brine (2300)

60028-30	Float Assy, 2350, 30", White
60027-FFA	Safety Brine Valve Body, 2300 Fitting Facing Arm
60027-FFS	Safety Brine Valve Body, Fitting Facing Stud

Sales and Service Aids

40097	Literature, 2510, S/Manual
16510	Literature, 2510, Spec Sheet

Seal & Spacer Kits

60129	Seal & Spacer Kit, 2850
60129-20	Seal & Spacer Kit, 2850, Natural
60129-30	Seal & Spacer Kit, 2850

Skipper Wheels

14860	Skipper Wheel Assy, 7 Day
14381	Skipper Wheel Assy, 12 Day

Yokess

13708-40	Yoke, 1", Sweat
13708-45	Yoke, 3/4", Sweat
18706	Yoke, 1", NPT, Plastic
18706-20	Yoke, 3/4", NPT, Plastic
19275	Yoke, Angle 90 Deg. 3/4", NPT
19275-45	Yoke, Angle 90 Deg. 3/4" Sweat
19620-01	Yoke Assy, 3/4", R/Angle, 90 Deg w/O- rings, Clips and Screws
40636	Yoke, 1-1/4", NPT
40636-49	Yoke, 1-1/4", Sweat
41026-01	Yoke, 1", NPT, SS
41027-01	Yoke, 3/4", NPT, Cast, Machd

